



Using Avaya Room Camera RC212 and Avaya Room Camera RC220

Notices

© 2026 Avaya LLC. All Rights Reserved.

You may, at your own risk, assemble a MyDocs collection solely for your own internal business purposes, which constitutes a modification to the original published version of the publications. Avaya shall not be responsible for any modifications, additions, or deletions to the original published version of publications. You agree to defend, indemnify and hold harmless Avaya, Avaya's agents, servants and employees against all claims, lawsuits, demands and judgments arising out of, or in connection with, your modifications, additions or deletions to the publications.

A single topic or a collection of topics may come from multiple Avaya publications. All of the content in your collection is subject to the legal notices and disclaimers in the publications from which you assembled the collection. For information on licenses and license types, trademarks, and regulatory statements, see the original publications from which you copied the topics in your collection.

Except where expressly stated by Avaya otherwise, no use should be made of materials provided by Avaya on this site. All content on this site and the publications provided by Avaya including the selection, arrangement and design of the content is owned by Avaya and/or its licensors and is protected by copyright and other intellectual property laws including the sui generis rights relating to the protection of databases. Avaya owns all right, title and interest to any modifications, additions or deletions to the content in the Avaya publications.

Notice

While reasonable efforts have been made to ensure that the information in this document is complete and accurate at the time of printing, Avaya assumes no liability for any errors. Avaya reserves the right to make changes and corrections to the information in this document without the obligation to notify any person or organization of such changes.

Documentation disclaimer

"Documentation" means information published in varying media which may include product information, subscription or service descriptions, operating instructions and performance specifications that are generally made available to users of products. Documentation does not include marketing materials. Avaya shall not be responsible for any modifications, additions, or deletions to the original published version of Documentation unless such modifications, additions, or deletions were performed by or on the express behalf of Avaya. End user agrees to indemnify and hold harmless Avaya, Avaya's agents, servants and employees against all claims, lawsuits, demands and judgments arising out of, or in connection with, subsequent modifications, additions or deletions to this documentation, to the extent made by End user.

Link disclaimer

Avaya is not responsible for the contents or reliability of any linked websites referenced within this site or Documentation provided by Avaya. Avaya is not responsible for the accuracy of any information, statement or content provided on these sites and does not necessarily endorse the products, services, or information described or offered within them. Avaya does not guarantee that these links will work all the time and has no control over the availability of the linked pages.

Warranty

Avaya provides a limited warranty on Avaya hardware and software. Please refer to your agreement with Avaya to establish the terms of the limited warranty. In addition, Avaya's standard warranty language as well as information regarding support for this product while under warranty is available to Avaya customers and other parties through the Avaya Support website: <https://support.avaya.com/helpcenter/getGenericDetails?detailId=C20091120112456651010> under the link "Warranty & Product Lifecycle" or such successor site as designated by Avaya. Please note that if the product(s) was purchased from an authorized Avaya channel partner outside of the United States and Canada, the warranty is provided by said Avaya Channel Partner and not by Avaya.

"Hosted Service" means an Avaya hosted service subscription that You acquire from either Avaya or an authorized Avaya Channel Partner (as applicable) and which is described further in Hosted SAS or other service description documentation regarding the applicable hosted service. If You purchase a Hosted Service subscription, the foregoing limited warranty may not apply but You may be entitled to support services in connection with the Hosted Service as described further in your service description documents for the applicable Hosted Service. Contact Avaya or Avaya Channel Partner (as applicable) for more information.

Hosted Service

THE FOLLOWING APPLIES ONLY IF YOU PURCHASE AN AVAYA HOSTED SERVICE SUBSCRIPTION FROM AVAYA OR AN AVAYA CHANNEL PARTNER (AS APPLICABLE). THE TERMS OF USE FOR HOSTED SERVICES ARE AVAILABLE ON THE AVAYA WEBSITE, [HTTPS://SUPPORT.AVAYA.COM/LICENSEINFO](https://support.avaya.com/licenseinfo) UNDER THE LINK "Avaya Terms of Use for Hosted Services" OR SUCH SUCCESSOR SITE AS DESIGNATED BY AVAYA, AND ARE APPLICABLE TO ANYONE WHO ACCESSES OR USES THE HOSTED SERVICE. BY ACCESSING OR USING THE HOSTED SERVICE, OR AUTHORIZING OTHERS TO DO SO, YOU, ON BEHALF OF YOURSELF AND THE ENTITY FOR WHOM YOU ARE DOING SO (HEREINAFTER REFERRED TO INTERCHANGEABLY AS "YOU" AND "END USER"), AGREE TO THE TERMS OF USE. IF YOU ARE ACCEPTING THE TERMS OF USE ON BEHALF A COMPANY OR OTHER LEGAL ENTITY, YOU REPRESENT THAT YOU HAVE THE AUTHORITY TO BIND SUCH ENTITY TO THESE

TERMS OF USE. IF YOU DO NOT HAVE SUCH AUTHORITY, OR IF YOU DO NOT WISH TO ACCEPT THESE TERMS OF USE, YOU MUST NOT ACCESS OR USE THE HOSTED SERVICE OR AUTHORIZE ANYONE TO ACCESS OR USE THE HOSTED SERVICE.

Licenses

The Global Software License Terms ("Software License Terms") are available on the following website <https://www.avaya.com/en/legal-license-terms/> or any successor site as designated by Avaya. These Software License Terms are applicable to anyone who installs, downloads, and/or uses Software and/or Documentation. By installing, downloading or using the Software, or authorizing others to do so, the end user agrees that the Software License Terms create a binding contract between them and Avaya. In case the end user is accepting these Software License Terms on behalf of a company or other legal entity, the end user represents that it has the authority to bind such entity to these Software License Terms.

Copyright

Except where expressly stated otherwise, no use should be made of materials on this site, the Documentation, Software, Hosted Service, or hardware provided by Avaya. All content on this site, the documentation, Hosted Service, and the product provided by Avaya including the selection, arrangement and design of the content is owned either by Avaya or its licensors and is protected by copyright and other intellectual property laws including the sui generis rights relating to the protection of databases. You may not modify, copy, reproduce, republish, upload, post, transmit or distribute in any way any content, in whole or in part, including any code and software unless expressly authorized by Avaya. Unauthorized reproduction, transmission, dissemination, storage, or use without the express written consent of Avaya can be a criminal, as well as a civil offense under the applicable law.

Virtualization

The following applies if the product is deployed on a virtual machine. Each product has its own ordering code and license types. Unless otherwise stated, each Instance of a product must be separately licensed and ordered. For example, if the end user customer or Avaya Channel Partner would like to install two Instances of the same type of products, then two products of that type must be ordered.

Third Party Components

The following applies only if the H.264 (AVC) codec is distributed with the product. THIS PRODUCT IS LICENSED UNDER THE AVC PATENT PORTFOLIO LICENSE FOR THE PERSONAL USE OF A CONSUMER OR OTHER USES IN WHICH IT DOES NOT RECEIVE REMUNERATION TO (i) ENCODE VIDEO IN COMPLIANCE WITH THE AVC STANDARD ("AVC VIDEO") AND/OR (ii) DECODE AVC VIDEO THAT WAS ENCODED BY A CONSUMER ENGAGED IN A PERSONAL ACTIVITY AND/OR WAS OBTAINED FROM A VIDEO PROVIDER LICENSED TO PROVIDE AVC VIDEO. NO LICENSE IS GRANTED OR SHALL BE IMPLIED FOR ANY OTHER USE. ADDITIONAL INFORMATION MAY BE OBTAINED FROM MPEG LA, L.L.C. SEE [HTTP://WWW.MPEGLA.COM](http://www.mpegla.com).

Service Provider

WITH RESPECT TO CODECS, IF THE AVAYA CHANNEL PARTNER IS HOSTING ANY PRODUCTS THAT USE OR EMBED THE H.264 CODEC OR H.265 CODEC, THE AVAYA CHANNEL PARTNER ACKNOWLEDGES AND AGREES THE AVAYA CHANNEL PARTNER IS RESPONSIBLE FOR ANY AND ALL RELATED FEES AND/OR ROYALTIES. THE H.264 (AVC) CODEC IS LICENSED UNDER THE AVC PATENT PORTFOLIO LICENSE FOR THE PERSONAL USE OF A CONSUMER OR OTHER USES IN WHICH IT DOES NOT RECEIVE REMUNERATION TO: (i) ENCODE VIDEO IN COMPLIANCE WITH THE AVC STANDARD ("AVC VIDEO") AND/OR (ii) DECODE AVC VIDEO THAT WAS ENCODED BY A CONSUMER ENGAGED IN A PERSONAL ACTIVITY AND/OR WAS OBTAINED FROM A VIDEO PROVIDER LICENSED TO PROVIDE AVC VIDEO. NO LICENSE IS GRANTED OR SHALL BE IMPLIED FOR ANY OTHER USE. ADDITIONAL INFORMATION FOR H.264 (AVC) AND H.265 (HEVC) CODECS MAY BE OBTAINED FROM MPEG LA, L.L.C. SEE [HTTP://WWW.MPEGLA.COM](http://www.mpegla.com).

Compliance with Laws

You acknowledge and agree that it is Your responsibility to comply with any applicable laws and regulations, including, but not limited to laws and regulations related to call recording, data privacy, intellectual property, trade secret, fraud, and music performance rights, in the country or territory where the Avaya product is used.

Preventing Toll Fraud

"Toll Fraud" is the unauthorized use of your telecommunications system by an unauthorized party (for example, a person who is not a corporate employee, agent, subcontractor, or is not working on your company's behalf). Be aware that there can be a risk of Toll Fraud associated with your system and that, if Toll Fraud occurs, it can result in substantial additional charges for your telecommunications services.

Avaya Toll Fraud intervention

If You suspect that You are being victimized by Toll Fraud and You need technical assistance or support, please contact your Avaya Sales Representative.

Security Vulnerabilities

Information about Avaya's security support policies can be found in the Security Policies and Support section of <https://support.avaya.com/security>.

Suspected Avaya product security vulnerabilities are handled per the Avaya Product Security Support Flow (<https://support.avaya.com/css/P8/documents/100161515>).

Downloading Documentation

For the most current versions of Documentation, see the Avaya Support website: <https://support.avaya.com>, or such successor site as designated by Avaya.

Contact Avaya Support

See the Avaya Support website: <https://support.avaya.com> for Product or Cloud Service notices and articles, or to report a problem with your Avaya Product or Cloud Service. For a list of support telephone numbers and contact addresses, go to the Avaya Support website: <https://support.avaya.com> (or such successor site as designated by Avaya), scroll to the bottom of the page, and select Contact Avaya Support.

Regulatory Statements

Industry Canada (IC) Statements

Radio Transmitter Statement

This Class A digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe A est conforme à la norme NMB-003 du Canada.

México Statement

The operation of this equipment is subject to the following two conditions:

1. It is possible that this equipment or device may not cause harmful interference, and
2. This equipment or device must accept any interference, including interference that may cause undesired operation.

La operación de este equipo está sujeta a las siguientes dos condiciones:

1. Es posible que este equipo o dispositivo no cause interferencia perjudicial y
2. Este equipo o dispositivo debe aceptar cualquier interferencia, incluyendo la que pueda causar su operación no deseada.

Brazil Statement

Este equipamento não tem direito à proteção contra interferência prejudicial e não pode causar interferência em sistemas devidamente autorizados

U.S. Federal Communications Commission (FCC) Statements

Compliance Statement

The changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

To comply with the FCC RF exposure compliance requirements, this device and its antenna must not be co-located or operating in conjunction with any other antenna or transmitter.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interferences that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

EU Countries

This device when installed complies with the essential requirements and other relevant provisions of the EMC Directive 2014/30/EU, Safety LV Directive 2014/35/EU, and Radio Equipment Directive 2014/53/EU. A copy of the Declaration may be obtained from <https://support.avaya.com> or Avaya LLC, 350 Mt. Kemble Avenue, Morristown, NJ 07960 USA.



Warning:

This equipment is compliant with Class A of CISPR 32. In a residential environment this equipment may cause radio interference.

General Safety Warning

Use only the Avaya approved Limited Power Source power supplies specified for this product.

Trademarks

The trademarks, logos and service marks ("Marks") displayed in this site, the Documentation, Hosted Service(s), and product(s) provided by Avaya are the registered or unregistered Marks of Avaya, its affiliates, its licensors, its suppliers, or other third parties. Users are not permitted to use such Marks without prior written consent from Avaya or such third party which may own the Mark. Nothing contained in this site, the Documentation, Hosted Service(s) and product(s) should be construed as granting, by implication, estoppel, or otherwise, any license or right in and to the Marks without the express written permission of Avaya or the applicable third party.

Avaya is a registered trademark of Avaya LLC.

All non-Avaya trademarks are the property of their respective owners.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Avaya LLC is under license.

Android, Google and Google Play are trademarks of Google Inc.

Device Usage Consent

By using the Avaya device, you agree that Avaya, from time to time, may collect network and device data from your device and may use such data in order to validate your eligibility to use the device.

Contents

Chapter 1: Introduction	6
Purpose	6
Change history	6
Chapter 2: Overview	7
Avaya Room Camera RC212 and Avaya Room Camera RC220 overview	7
Features	8
Package list	8
Avaya Room Camera RC212 dimensions	9
Avaya Room Camera RC220 dimensions	10
Avaya Room Camera RC212 physical layout	12
Avaya Room Camera RC220 physical layout	14
Remote control	15
Assigning a camera to the remote control Camera Select buttons	18
System Select rotary switch values	18
Audio input and output pinout	19
Safety guidelines	20
Chapter 3: Initial setup and connectivity	21
Installation checklist	21
Mounting the camera	21
Connecting and powering on the camera	23
Chapter 4: Camera configuration in the OSD menu	25
Accessing the OSD menu	25
Selecting the OSD menu language	25
Configuring display and video settings	26
Configuring pan, tilt, and zoom	27
Configuring exposure	29
Configuring color settings	31
Configuring image settings	32
Configuring network settings	34
Viewing camera details	35
Performing a factory reset	35
Chapter 5: Camera configuration in the web interface	36
Accessing the web interface	37
Selecting the web interface language	37
Changing the web interface password	38
Configuring pan, tilt, and zoom	38
Saving the presets for pan, tilt, and zoom	39
Configuring audio settings	39
Configuring video settings	40

Image configuration.....	42
Configuring exposure settings.....	42
Configuring color settings.....	44
Configuring image settings.....	45
Configuring auto focus settings.....	46
Configuring noise reduction.....	47
Configuring image style.....	47
Network configuration.....	48
Configuring LAN settings.....	48
Configuring port settings.....	48
Configuring RTMP settings.....	49
Configuring SRT settings.....	49
Configuring RTSP authentication.....	51
Configuring ONVIF settings.....	51
Configuring multicast settings.....	51
Configuring FreeD settings.....	52
Configuring NTP settings.....	52
Configuring NDI settings.....	53
Configuring overlay settings.....	54
Viewing camera details.....	55
Performing a factory reset.....	55
Rebooting the camera software.....	56
Downloading the upgrade file.....	56
Updating the camera software.....	57
Chapter 6: AI tracking	58
Configuring AI tracking from the OSD menu.....	58
Configuring Presenter mode from the web interface.....	59
Configuring Zone mode from the web interface.....	60
Enabling Auto Frame mode from the web interface.....	61
Managing AI tracking with the remote control.....	62
Chapter 7: RS232 interface	63
RS232 interface.....	63
Chapter 8: Troubleshooting	65
Troubleshooting video issues.....	65
Unable to access the camera web interface.....	65
The remote and serial port controls do not connect to the camera.....	66
Chapter 9: Resources	67
Documentation.....	67
Avaya Documentation Center navigation.....	67
Finding documents on the Avaya Support website.....	69
Support.....	69
Using the Avaya InSite Knowledge Base.....	69

Chapter 1: Introduction

Purpose

This document describes how to use Avaya Room Camera RC212 and Avaya Room Camera RC220 features and is for individuals who set up and use these cameras with Avaya Room System C100 Series codecs in conference rooms.

Change history

Issue	Date	Summary of changes
4	February 2026	Minor diagram improvements and consistency updates.
3	July 2025	Added the details on the remote control range at: • Remote control on page 15 • Mounting the camera on page 21
2	December 2024	Added a high-level camera description at Avaya Room Camera RC212 and Avaya Room Camera RC220 overview on page 7.
		Added a statement about resetting pan, tilt, and zoom settings to the default values at Selecting the web interface language on page 37.
		Added a statement about obtaining a bracket for ceiling-mounting at Mounting the camera on page 21.
		Minor consistency updates throughout the document.
1	September 2024	First released version of the document.

Chapter 2: Overview

Avaya Room Camera RC212 and Avaya Room Camera RC220 overview

Avaya Room Camera RC212 is the first in the series and is an ultra-wide-angle camera with 72.5° field of view (FOV), 12x optical zoom, and 16x digital zoom. Avaya Room Camera RC220 is an ultra-wide-angle camera with 60.7° field of view (FOV), 20x optical zoom, and 16x digital zoom.

Both cameras support 1080p HD resolution with AI-assisted face recognition. They are designed for medium to large room sizes and provide high quality features and connectivity.

Avaya Room Camera RC212 and Avaya Room Camera RC220 come with an ISP audio and image processing algorithm and an HDMI interface to connect to Avaya Room System C100 Series.

The cameras are compatible with all Avaya Room System C100 Series models.

The following image shows a diagonal view of Avaya Room Camera RC212:



The following image shows a diagonal view of Avaya Room Camera RC220:



Features

Avaya Room Camera RC212 and Avaya Room Camera RC220 provide the following features:

Feature	Description
1080P Full HD	A 1/2.8-inch high-quality HD CMOS sensor with 2.07 million pixels supports high-quality images with a maximum resolution of 1920x1080.
AI tracking	The camera uses upgraded AI technology and facial recognition to accurately determine the location of people and provide automatic tracking and frame selection.
Audio Processing Algorithm	The exclusive audio processing algorithm can eliminate reverberation, effectively reduce environmental noise, and support EQ adjustment to optimize sound effects. The device supports dual mic pickup. You can connect to external microphones to meet the pickup needs of most scenarios.
Auto Focus Technology	The lens can focus quickly, accurately and reliably using an advanced focusing algorithm.
Multiple interfaces	The camera supports HDMI 2.0 and SDI output interfaces. The transmission distance of SDI is up to 150 m (1080p30). HDMI, SDI, and LAN can simultaneously output three HD digital signals.
Power over Ethernet	In addition to the 12V DC power supply, you can choose to power Avaya Room Camera RC212 and Avaya Room Camera RC212 using IEEE 802.1af Class 4 PoE.
Optical zoom	Avaya Room Camera RC212 high-quality ultra-wide-angle lens provides optical zoom up to 12x and supports 16x digital zoom. The maximum field angle is 72.5°.
	Avaya Room Camera RC220 high-quality ultra-wide-angle lens provides optical zoom up to 20x and supports 16x digital zoom. The maximum field angle is 60.7°.
New ISP Image Processing Algorithm	The new generation ISP image processing algorithm provides more complete white balance and automatic exposure functions, which significantly improves the image output performance and the imaging effect of the camera. Suitable for education recording and broadcasting, distance education, video conferencing, live broadcasting, broadcasting and other industries.
Remote control	You can enable remote control through the RS232 and RS485 serial ports.

Package list


The camera package list includes the following components:

Component name	Quantity
Camera	1
Remote control	1
Power adapter	1
1.5 mm RJ45-DIN8 RS232 camera control cable	1
3 m HDMI cable	1
Wall mount	1


Avaya Room Camera RC212 dimensions

The following images show Avaya Room Camera RC212 dimensions. The images are not at 1:1 scale and the measures are in millimeters.


Front view

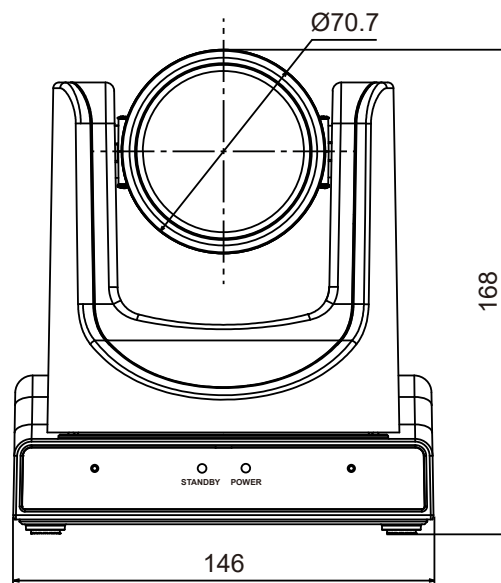

Side view

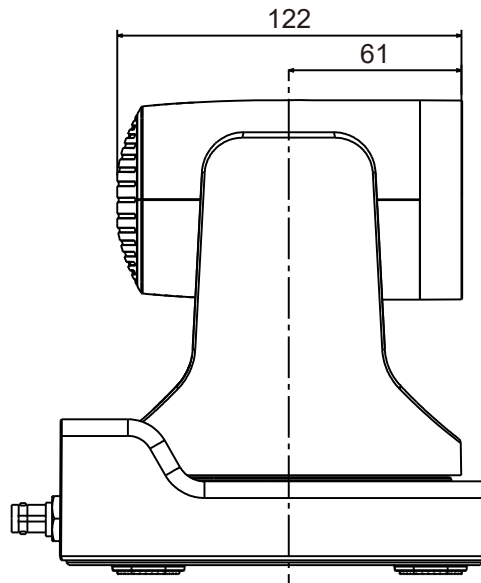


Bottom view

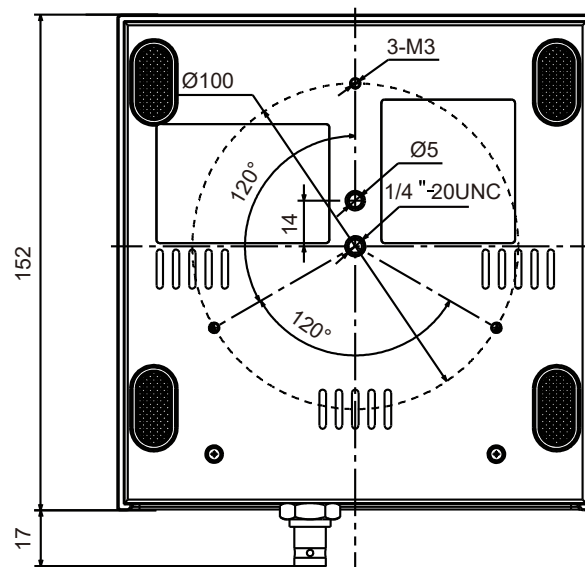


Avaya Room Camera RC220 dimensions

The following images show Avaya Room Camera RC220 dimensions. The images are not at 1:1 scale and the measures are in millimeters.


Front view

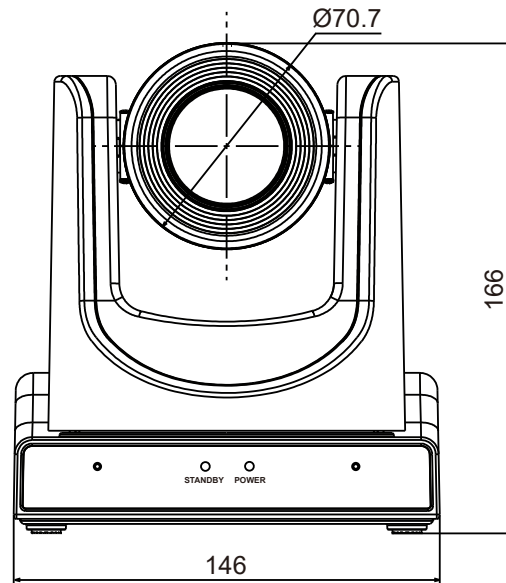

Side view

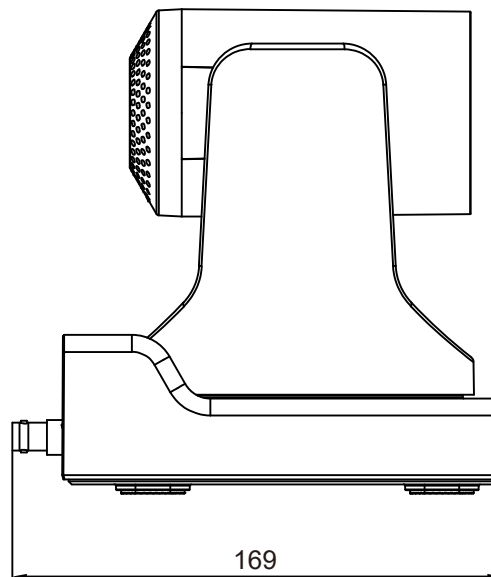



Bottom view

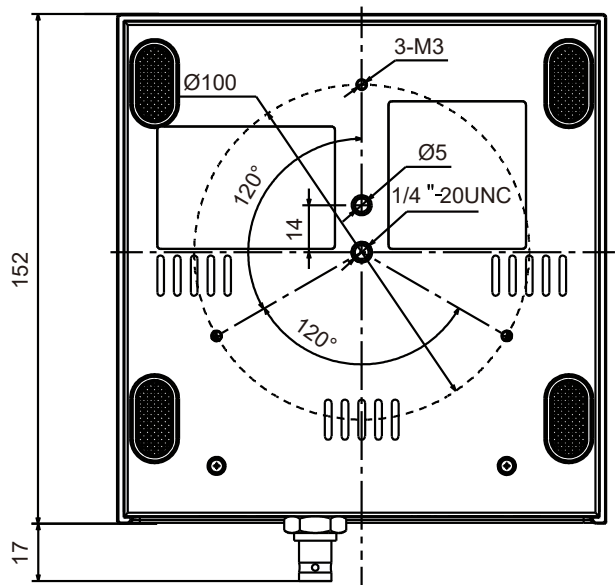

Avaya Room Camera RC212 physical layout

The following images and table give an overview of the Avaya Room Camera RC212 physical layout:

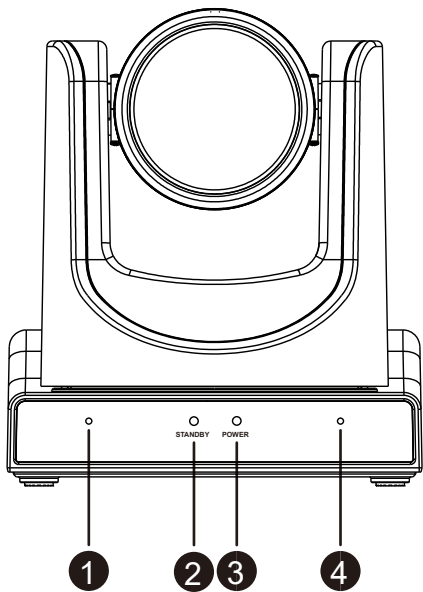


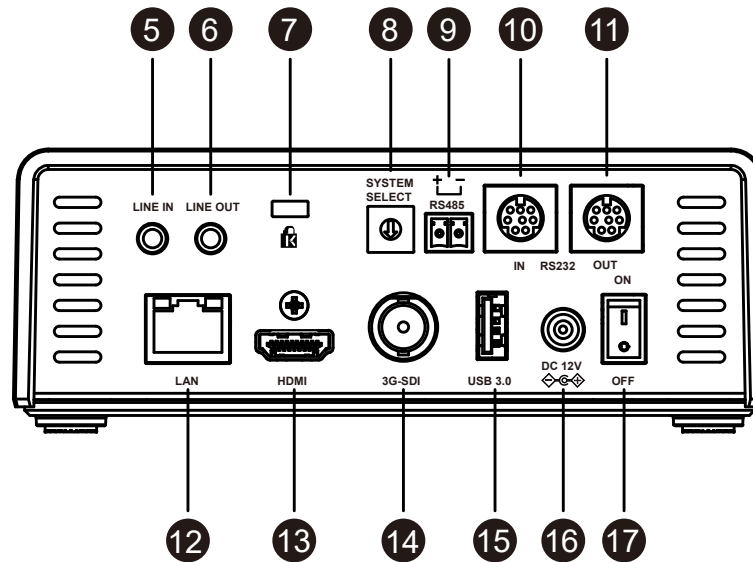

Number	Component name
1.	Microphone
2.	Standby indicator
3.	Power indicator
4.	Microphone
5.	LINE IN port
6.	LINE OUT port
7.	Security slot
8.	System Select switch
9.	RS485 port
10.	RS232 IN port
11.	RS232 OUT port
12.	LAN port
13.	HDMI port
14.	3G-SDI port
15.	USB port
16.	DC 12V port
17.	Power switch

Avaya Room Camera RC220 physical layout

The following images and table give an overview of the Avaya Room Camera RC220 physical layout:

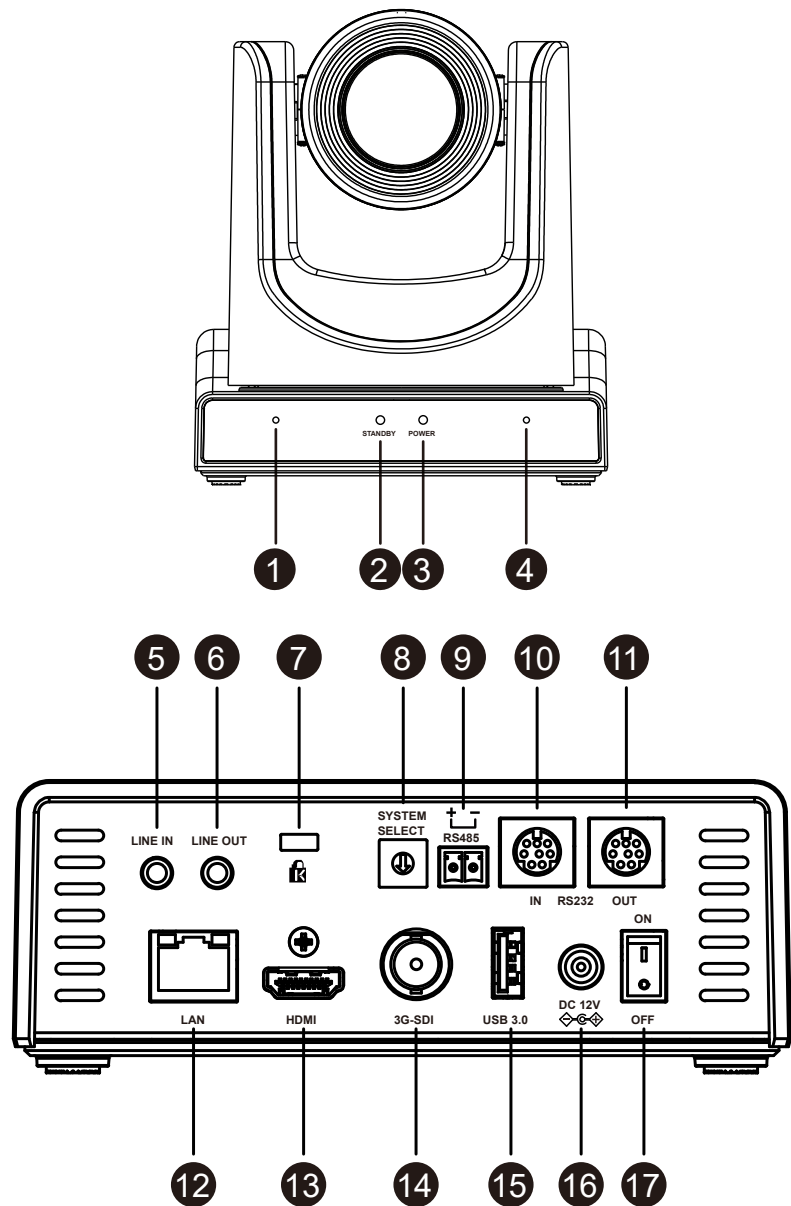

Number	Component name
1.	Microphone
2.	Standby indicator
3.	Power indicator


Table continues...

Number	Component name
4.	Microphone
5.	LINE IN port
6.	LINE OUT port
7.	Security slot
8.	System Select switch
9.	RS485 port
10.	RS232 IN port
11.	RS232 OUT port
12.	LAN port
13.	HDMI port
14.	3G-SDI port
15.	USB port
16.	DC 12V port
17.	Power switch

Remote control

Avaya Room Camera RC212 and Avaya Room Camera RC220 support a remote control unit. You can use the remote control within the range of 15 meters from the device. You must use it by either directly pointing at the camera or at a horizontal or vertical angle of up to 15°. To increase the remote control range, you can use a third-party IR repeater.

The following image shows the camera remote control:

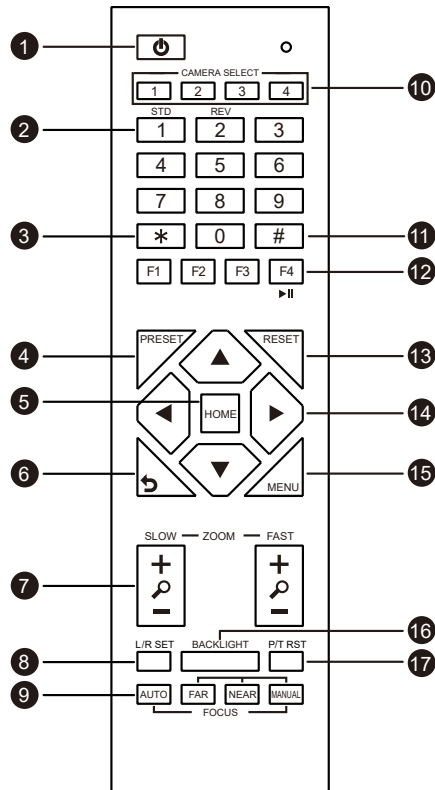

The following table describes remote control buttons and their functions.

Number	Button name	Description
1.	Standby	Press the Standby button to go into Standby mode.
2.	Number buttons	- To set a pan, tilt, and zoom preset: move the camera to the required PTZ position, press the Preset button, and press a number from 0 to 9 to save the preset. - To recall a saved PTZ preset: press a number button from 0 to 9 corresponding to the preset.
3.	*	Use the * button in a combination with other buttons. For example, press * + # + 4 to view the camera IP address.
4.	Preset	Use the Preset button in a combination with number buttons: press Preset and then a number button.
5.	Home	Use the Home button to confirm selection or to set the camera pan, tilt, and zoom to the middle position.
6.	Return	Press the Return button to return to the previous menu or exit the OSD menu.

Table continues...

Number	Button name	Description
7.	Zoom	• Use the slow zoom buttons to zoom in or zoom out slowly. • Use the fast zoom buttons to zoom in or zoom out fast.
8.	L/R Set	Use the L/R Set button to reverse the direction of pan arrow buttons. The settings are stored on the remote control. • Standard mode: Simultaneously press L/R Set and 1. • Reversed mode: Simultaneously press L/R Set and 2.
9.	Focus	Use the Auto , Far , Near , and Manual buttons to set camera focus.
10.	Camera Select	Press a button to select and control the corresponding camera.
11.	#	Use the # button in a combination with other buttons. For example, press *+ # +6 to restore the default settings.
12.	Auto Tracking	Use the following buttons in the section to manage AI tracking modes: • F1: To enable Auto Frame mode. • F2: To enable Zone mode. • F3: To enable Presenter mode. The camera tracks the presenter using the figure size mode that you selected in the web interface. • F4: To exit the AI tracking menu.
13.	Reset	To clear a preset PTZ position, press Reset and a number button from 0 to 9.
14.	PT arrow buttons	Use arrow buttons to manage the camera pan and tilt position.
15.	Menu	Press the Menu button to enter or exit the On Screen Display (OSD) menu.
16.	Backlight	If there is light behind the object and the object becomes dark, press the Backlight button to enable backlight compensation. Press the button again to disable this function. This function is available in Auto Exposure mode.
17.	P/T RST	When you press the P/T RST button, the camera performs pan and tilt calibration.

Remote control shortcuts

The following table lists the remote control shortcut combinations and provides their description:

Shortcut	Description
*+#+1	To display the On Screen Display (OSD) menu in English.
*+ # +3	To display the OSD menu in Chinese.
*+ # +4	To view the current IP address.
*+ # +6	To quickly restore the default settings.
*+ # +8	To view the camera version.
*+ # +9	To quickly enable inversion.
*+ # +MANUAL	To refresh an IP address when using DHCP.

Assigning a camera to the remote control Camera Select buttons

About this task

One remote control unit can manage up to four cameras. You can assign a camera to one of the four remote control **Camera Select** buttons to quickly access and manage the corresponding camera.

Procedure

1. To check if the remote control can access the camera, press one of the PT arrow buttons or the **Menu** button.
2. To assign the camera to a remote control camera button, press the following button combinations:
 - *+ # +F1: Camera 1
 - *+ # +F2: Camera 2
 - *+ # +F3: Camera 3
 - *+ # +F4: Camera 4
3. To select the camera you want to manage, press the corresponding **Camera Select** button.

System Select rotary switch values

You can manually set the HDMI and 3G SDI video resolution and frame rate values on the System Select rotary switch on the camera back panel. The camera uses manually set resolution values

if you select **Dial Priority** for the **Video Format** setting when configuring video settings from the web interface.

After changing the video resolution from the rotate switch, you must restart the camera for the changes to take effect.

The following table lists the System Select numbers and letters that you can see on the back panel and the corresponding video resolution values:

System Select value	Video resolution
0	1080p60
1	1080p50
2	1080i60
3	1080i50
4	720p60
5	720p50
6	1080p30
7	1080p25
8	—
9	—
A	1080p59.94
B	1080i59.94
C	1080p29.97
D	—
E	—
F	720p59.94

Audio input and output pinout

The following table shows audio input and output pinout:

Connection type	Ring	Tip	Sleeve
Input	Left	Right	Ground
Output	Left	Right	Ground

Safety guidelines

Observe the following safety guidelines when setting up and using the camera:

- You must ensure the security of administrator and user access to the camera. Avaya recommends changing the default administrator password during the installation process.
- When installing and using the camera, follow all electrical safety regulations applicable in your country or region.
- Always use the power adapter provided with the camera. Do not connect multiple devices to the same adapter. This can lead to overload, overheating, or fire hazards.
- Avoid rotating the camera head by hand to prevent mechanical failures.
- When mounting the camera on a wall or ceiling, ensure it is securely fastened. Check that there are no obstructions within the gimbal rotation range before powering the device.
- Maintain proper ventilation around the camera to prevent heat buildup.
- If you notice smoke, unusual smells, or strange noises coming from the camera, turn off the power, unplug the cord, and contact support for assistance.
- Keep the camera dry. The camera is not waterproof.
- The camera does not have user-serviceable parts. Do not disassemble the camera. Any damage from disassembling is not covered under warranty.

Chapter 3: Initial setup and connectivity

Installation checklist

The following checklist lists the actions that you must perform to install Avaya Room Camera RC212 or Avaya Room Camera RC220 and provides links to the corresponding procedures:

No.	Task	Reference	✓
1.	Place the camera at a suitable location in the venue or room.	Safety guidelines on page 20	
2.	(Optional) Mount the camera on a wall or a ceiling.	Mounting the camera on page 21	
3.	Connect the required adjuncts and other peripheral devices to the camera.	Connecting and powering on the camera on page 23	
4.	Connect the camera to a power outlet and turn on the power.	Connecting and powering on the camera on page 23	

Mounting the camera



Before you ceiling-mount the camera, ensure that you obtained the bracket. Avaya does not provide the ceiling-mounting bracket for Avaya Room Camera RC212 and Avaya Room Camera RC220.

When mounting the camera, place it so that you can either directly point at it with the remote control or at a vertical or horizontal angle of up to 15°. The remote control range is within 15 meters, but you can use a third-party IR repeater to increase the range.

The following images show the order of actions to perform for mounting Avaya Room Camera RC212 or Avaya Room Camera RC220 on either a wall or a ceiling.

 Warning:

The installation diagrams are for reference only. You must ensure that the fastener is suitable for your mounting surface.

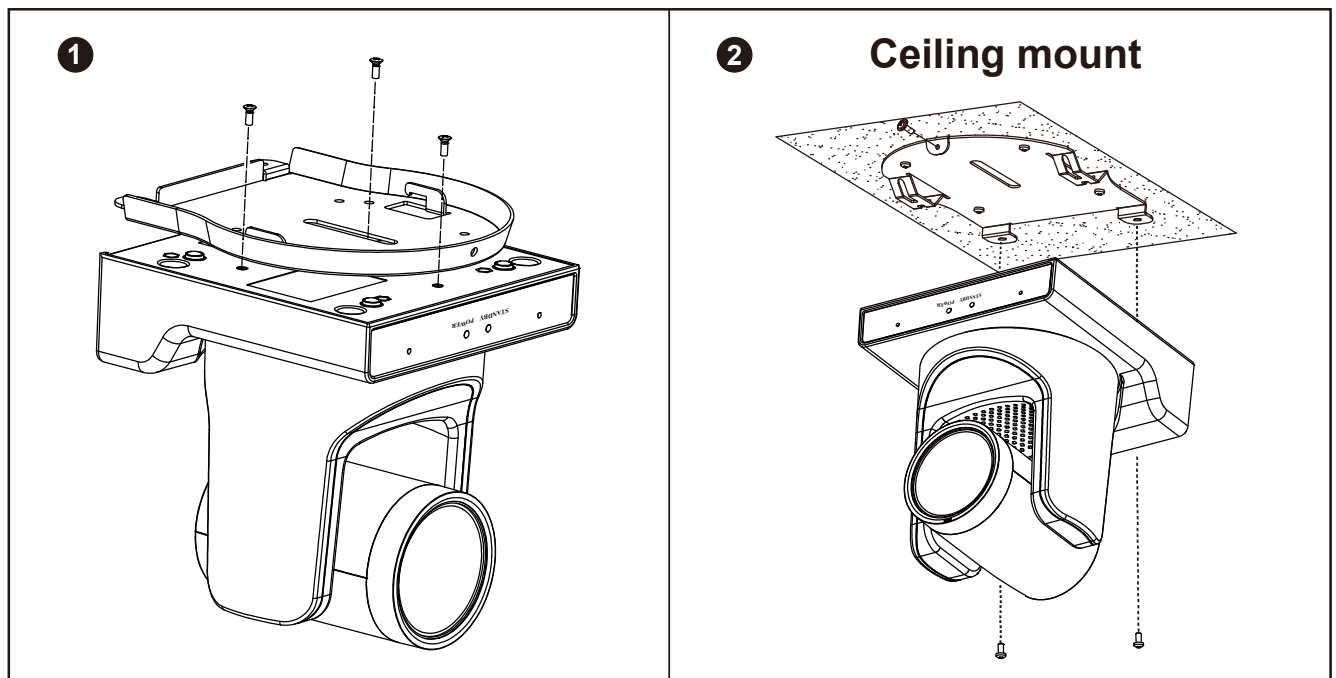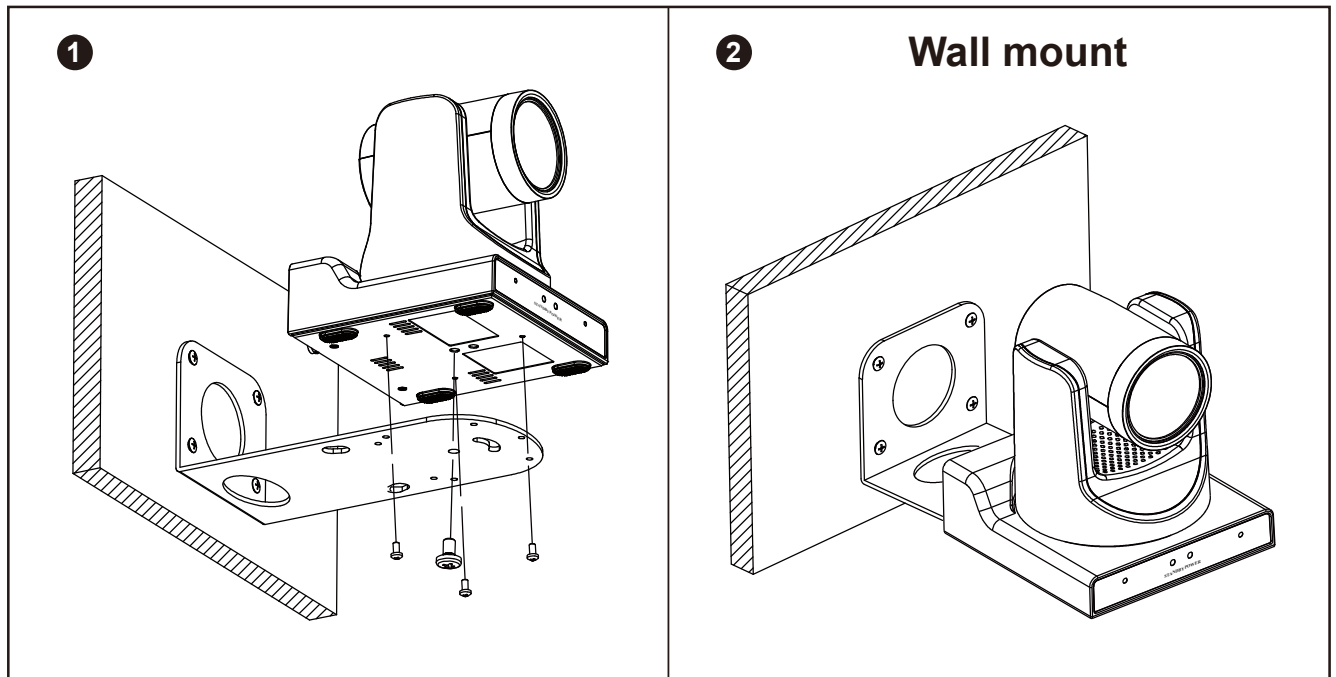

Connecting and powering on the camera

About this task

Perform this procedure during the initial setup of the camera or after any power-related repairs to ensure the camera functions correctly.

For optimal performance, you must check the power adapter and its function when connecting and powering on the camera.


Before you begin

Ensure that you use the power adapter that comes with the camera and that the power source is accessible.


Procedure

1. Connect all necessary cables to the corresponding ports on the camera.

The following image shows Avaya Room Camera RC212 cable ports:

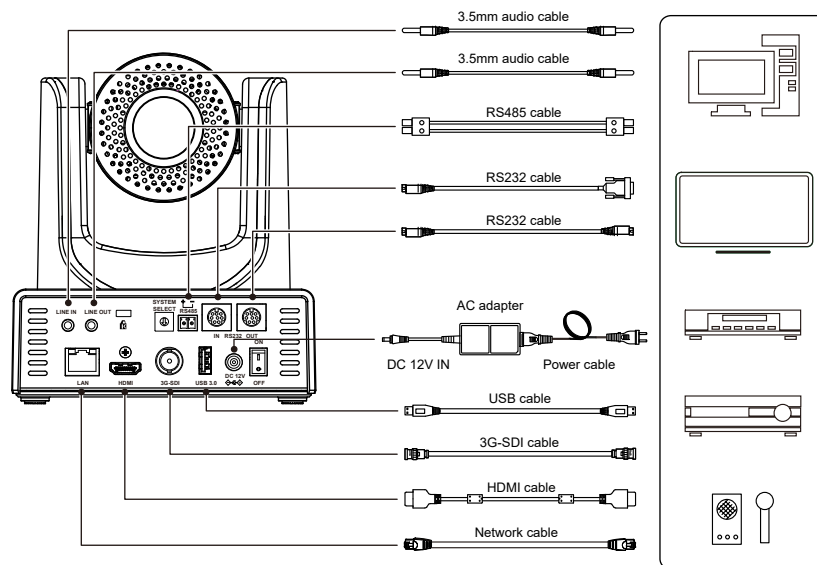

The following image shows Avaya Room Camera RC220 cable ports:

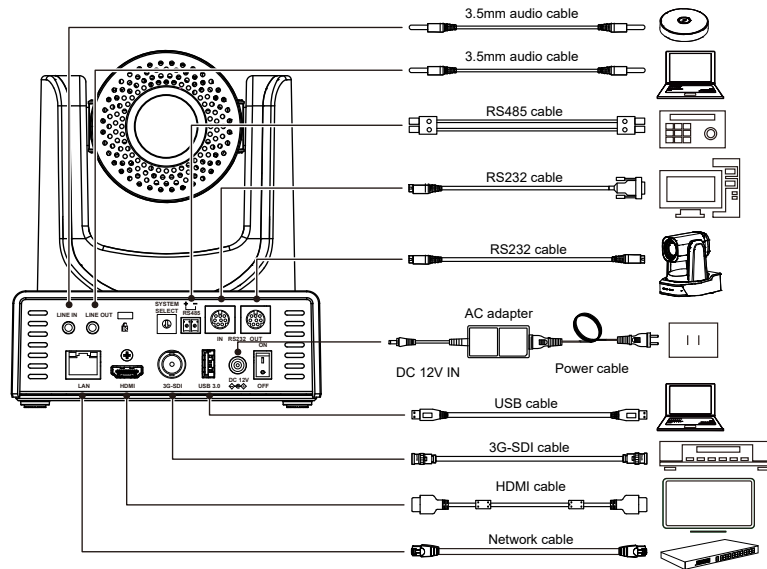

2. Connect the power adapter to the power jack located on the back of the camera.
3. Plug the other end of the power adapter into a power outlet.
4. Turn on the power switch after connecting the power adapter.

The illuminated power indicator shows that the camera is receiving power. The camera initiates a self-test process, which includes the calibration of its position. After the calibration, the camera returns to the Pan-Tilt-Zoom (PTZ) preset 0 position if configured.

Chapter 4: Camera configuration in the OSD menu

Use the On Screen Display (OSD) menu to configure parameters for optimal camera performance.

You can access the OSD menu to configure image settings, such as exposure, color, noise reduction, and other settings. You can also set up network settings and restore the default configuration.

For more information about configuring AI tracking from the OSD menu, see [AI tracking](#) on page 58.

Accessing the OSD menu

About this task

Use the remote control to access the camera On Screen Display (OSD) menu. The camera LED display shows the OSD menu options.

Procedure

1. On the remote control, press the **Menu** button.
The camera displays the main menu.
2. Use the **Up** and **Down** arrow buttons on the remote control for navigation.
3. Use the **Left** and **Right** buttons to select a value.
4. To access a menu, move the cursor to its name and press the **Home** button.

Selecting the OSD menu language

About this task

You can change the language of the OSD menu before configuring the camera settings.

Procedure

1. On the main menu, go to the **Language** setting.

2. Select the language with the arrow buttons.

The OSD menu language changes automatically.

Configuring display and video settings

About this task

Configure global settings to set up OSD menu and video orientation, DVI and SDI modes, PTZ preset parameters, and other settings.

Procedure

1. On the main menu, select **Display**.
2. On the Display menu, for the **OSD-Dir** setting, select the OSD menu orientation.

The OSD menu orientation changes automatically.

3. For the **Frac Rate** setting, select one of the following options:

- **On**
- **Off**

To apply the changes for this setting, you must reboot the camera.

4. For the **Video Format** setting, select the output video format.
5. For the **DVI Mode** setting, select one of the following DVI connector output types:

- **HDMI**
- **DVI**

6. For the **SDI Mode** setting, select the type of the SDI output interface.

Level A supports one 3G stream. Level B supports two 1.5G streams: one dual-link stream or two separate streams.

7. For the **Flip-H** setting, select one of the following options:

- **On**: To invert the video image horizontally.
- **Off**: To display the original video image.

8. For the **Flip-V** setting, select one of the following options:

- **On**: To invert the video image vertically.
- **Off**: To display the original video image.

9. For the **Freeze at calling preset** setting, select one of the following options:

- **On**: The video image freezes at the last frame of the previous PTZ position when the camera moves to another PTZ preset position. The video image resumes when the camera fully takes the new position.

- **Off:** The video image reflects the camera movements as it takes the new PTZ position.
10. For the **Save isp param at preset** setting, select one of the following options:
 - **On:** To save the current Image Signal Processor (ISP) camera parameters when configuring PTZ presets. The ISP parameters include brightness, white balance, sharpness, noise reduction, auto focus, and other parameters.
 - **Off:** Not to save the current ISP parameters for the PTZ presets.
 11. For the **Display Info** setting, select one of the following options:
 - **On:** To show the camera metadata on top of the video.
 - **Off:** To display only the video.
 12. For the **GDC** setting, select one of the following options:
 - **On**
 - **Off**

To apply the changes for this setting, you must reboot the camera.
 13. Select **Back** to return to the main menu.

Configuring pan, tilt, and zoom

About this task

Configure pan, tilt, and zoom (PTZ) settings to control remotely the camera movements and focus.

Procedure

1. On the main menu, select **P/T/Z**.
2. On the P/T/Z menu, for the **AF Sens** setting, select the level of auto focus sensitivity.

A higher value corresponds to a slower auto focus response. For example, if you select **High** and something passes between the object in focus and the camera, you are less likely to lose focus on the object.
3. For the **AF Region** setting, select the frame area for auto focus.

The camera automatically focuses on the objects within the selected area.
4. For the **AF Limit** setting, select one of the following options:
 - **On:** To set a near and far distance limit for auto focus.
 - **Off:** To disable auto focus distance limit.
5. If you enabled auto focus limit, for the **Near Limit** setting, select the near distance limit to focus the camera.

6. If you enabled auto focus limit, for the **Far Limit** setting, select one of the following options:
 - A numeric value for the far distance limit in meters.
 - **INF**: To disable auto focus limit for far distances.
7. For the **LR Mode** setting, select one of the following options:
 - **STD**: To enable standard pan movements.
 - **REV**: To enable reversed pan movements.
8. For the **Motion Sync** setting, select one of the following options:
 - **On**
 - **Off**
9. For the **PTZ Speed Setting** setting, select one of the following options:
 - **Preset Speed**: To use the default speed for pan, tilt, and zoom camera movements.
 - **Custom Speed**: To set up manually pan, tilt, and zoom speed.
10. If you selected custom PTZ speed, do the following:
 - a. For the **Custom Speed** setting, select **On**.
 - b. For the **Horizontal Speed** setting, select the value for the pan movement speed.
 - c. For the **Vertical Speed** setting, select the value for the tilt movement speed.
 - d. For the **Zoom Speed** setting, select the value for the zoom speed.
11. For the **PTbyZoom** setting, select one of the following options:
 - **On**: To adjust the pan and tilt speed based on the zoom level. The pan and tilt speed is reduced so that the video image does not change too quickly.
 - **Off**: To use the default pan and tilt speed.
12. For the **Digital Zoom** setting, select one of the following options:
 - One of the zoom values from 2x to 16x.
 - **Off**: To disable digital zoom.

With digital zoom, the camera zooms in a certain area of the existing image by enlarging it to the number of megapixels the camera has. You might have video quality issues if you zoom in too far from the camera sensor.
13. Select **Back** to return to the main menu.

Configuring exposure

About this task

Configure exposure to determine how bright or dark your video looks by adjusting the amount of light that reaches the camera sensor. Exposure ensures the video is not too bright or dark and helps to capture details in different lighting conditions.

Procedure

1. On the main menu, select **Exposure**.
2. On the Exposure menu, select the setting options with the remote control arrow buttons.
3. Select **Back** to return to the main menu.

Exposure menu settings

The following table lists the settings available on the Exposure menu and provides their description:

Setting name	Description
Exposure	You can select one of the following exposure modes: • Auto: The camera automatically determines the exposure settings. • Manual: To set up iris, shutter, gain, and DRC (Dynamic Range Compression) settings manually. • Shutter Priority: To select Shutter Automatic (SAE) mode and set the shutter time manually. • Iris Priority: To select Aperture Automatic (AAE) mode and set the size of the iris opening. The camera automatically determines the shutter settings. • Bright Priority: To adjust the brightness level manually.
Flicker	You can disable the anti-flicker setting or select one of the options. Use this setting to record high-quality video under artificial flickering lighting. This setting is available in Auto, Iris Priority, and Bright Priority modes.
Backlight	Enable the backlight compensation if there is light behind the object and the object becomes dark. This setting is available in Auto and Iris Priority modes.
Bright	Select the level of brightness. This setting is available in Bright Priority mode.
DRC	Select a value to manage the level of Dynamic Range Compression (DRC). This setting is available when the DRC mode is set to Manual. The DRC setting reduces the dynamic image range by taking out the darkest and lightest parts.

Table continues...

Setting name	Description
DRC Mode	You can select one of the following options to determine Dynamic Range Compression (DRC) mode: • Auto: The camera automatically determines the DRC setting. • Off: The camera does not use dynamic range compression. • Manual: You can manually set the DRC level. This setting is available in all modes.
Expcomp	Select an exposure compensation value. This setting is available when Expcomp Mode is on.
Expcomp Mode	You can enable Exposure Compensation mode to manually manage the exposure setting. This setting is available in Auto and Iris Priority modes.
Gain	Select the level of artificial brightness and contrast that the camera automatically adds to the image. This setting is available in Manual mode.
Gain Limit	Select the maximum level of gain. Gain is the brightness and contrast that the camera automatically adds to the image. This setting is available in Auto, Iris Priority, Shutter Priority, and Bright Priority modes.
Iris	Select the number of f-stops to control how open the camera iris is. For example, if you select 1.8 f-stops, you can get the brightest video image with the lowest depth of field. This setting is available in Manual and Iris Priority modes.
Metering Mode	You can select one of the following options to determine the image area from which the camera takes samples for checking the level of lighting: • Average: The camera takes samples from multiple areas in the image and calculates the average value. • Bottom: The camera takes samples from the image bottom. • Center: The camera takes samples from the image center. • Top: The camera takes samples from the image top. This setting is available in Auto, Iris Priority, and Bright Priority modes.
Shutter	Select the amount of time per second per frame during which the camera sensor is exposed to light. This setting is available in Manual and Shutter Priority modes.

Configuring color settings

About this task

Configure color settings to adjust the white balance mode, saturation, hue, and other settings. They help to ensure accurate color reproduction and enable you to customize the visual style of your video.

Procedure

1. On the main menu, select **Color**.
2. On the Color menu, select the setting options with the remote control arrow buttons.
3. Select **Back** to return to the main menu.

Color menu settings

The following table lists the settings available on the Color menu and provides their description:

Setting name	Description
WB Mode	You can select one of the following white balance modes: • Auto: Use this mode to automatically determine the RGB range values. • Indoor: Use this mode for recording indoor events, such as conferences. • Outdoor: Use this mode for recording outdoor events. • Manual: Use this mode to manually set the RGB range values. • One Push: Use this mode to manually set the white balance with a white object. For example, after selecting this mode, place a white sheet of paper within the camera frame. The camera uses the new white color reference instead of the internal one. • Temp: Use this mode to manually adjust the color temperature.
AWB Sens	Select the level of white balance sensitivity. For example, if the camera fails to measure the white balance correctly, you can select a lower sensitivity. This setting is available in Auto mode.
B-Gain	Select a value for the blue and green color range. This setting is available in Manual and One Push modes.
B-Tuning	Select a value to adjust the blue and green color balance. This setting is available in Auto, One Push, Indoor, Outdoor, and Temp modes.
Color Temp	Select a color temperature value in Kelvins (K). A higher color temperature corresponds to cooler, more bluish shades. This setting is available in Temp mode.

Table continues...

Setting name	Description
Hue	Select the dominant video color. This setting is available in all modes.
R-Gain	Select a value for the red and green color range. This setting is available in Manual and One Push modes.
R-Tuning	Select a value to adjust the red and green color balance. This setting is available in Auto, One Push, Indoor, Outdoor, and Temp modes.
Saturation	Adjust the level of color intensity. This setting is available in all modes.
Start Calc	Select Start Calc after you place a white object within the camera frame in One Push mode. The camera calculates all other color settings based on the new white color reference. This setting is available in One Push mode.

Configuring image settings

About this task

Configure image settings to adjust video quality. You can make video brighter or darker, enhance or soften details, set colors to be more vibrant or muted, and make other adjustments.

You can also enable 2D or 3D Digital Noise Reduction (DNR) and select the noise reduction level.

Procedure

1. On the main menu, select **Image**.
2. On the Image menu, for the **Style** setting, select one of the following options:
 - **Default**: To use the default image style.
 - **HLG**: To use the Hybrid Log Gamma (HLG) format for outputting an HDR image with a good balance of brightness.
 - A preset style, such as **Cold**, **Warm**, **Clear**, **Soft**, **Education**.
 - A custom mode.
3. For the **Brightness** setting, select the level of image brightness.
4. For the **Contrast** setting, select the level of image contrast.
5. For the **Sharpness Mode** setting, select one of the following options:
 - **Auto**: The camera automatically selects the sharpness level.
 - **Manual**: You can manually adjust the sharpness level.
6. If you selected Manual mode, for the **Sharpness** setting, select the level of image sharpness.

7. For the **Gamma Mode** setting, select one of the following options:
 - **Auto**: The camera automatically selects the gamma value.
 - **Manual**: You can manually select the gamma value.
8. If you selected Manual mode, for the **Gamma** setting, select one of the following options:
 - A numeric value.
 - **Exp**.
 - **HLG**: To use the HDR gamma curve.

The gamma setting determines how smoothly black transitions to white and the overall brightness of gray tones.

9. For the **NR-2D Mode** setting, select one of the following options:
 - **Auto**: The camera automatically selects the 2D noise reduction level.
 - **Manual**: You can manually select the 2D noise reduction level.

2D Digital Noise Reduction (DNR) is a form of temporal noise reduction which analyzes every pixel in the frame sequentially and looks for inconsistent pixels to repair them. You can use 2D DNR for basic noise reduction in low-resolution static video.

10. If you selected Manual mode, for the **NR-2D** setting, select the level of 2D noise reduction.
11. For the **NR-3D Mode** setting, select one of the following options:
 - **Auto**: The camera automatically selects the 3D noise reduction level.
 - **Manual**: You can manually select the 3D noise reduction level.

3D Digital Noise Reduction (DNR) is based on spacial noise reduction which compares the pixels in each frame individually and then compares these frames to each other. You can use 3D DNR for noise reduction in high-resolution video with motion and in low lighting conditions.

12. If you selected Manual mode, for the **NR-3D** setting, select the level of 3D noise reduction.
13. For the **PF Correction Mode** setting, select one of the following values:
 - **On**
 - **Off**
14. If you enabled PF Correction mode, for the **PF Correction Level** setting, select the level of PF correction.
15. Select **Back** to return to the main menu.

Configuring network settings

About this task

Configure camera network settings to enable connectivity with external devices and set up remote control. You can also view the camera IP and MAC address at the bottom of the menu.

From the Communication Setup OSD menu, you can only enable or disable the DHCP assignment of the camera IP address. You can specify the IP address from the Network tab in the web interface.

Procedure

1. On the main menu, select **Communication Setup**.
2. On the Communication Setup menu, for the **Visca Addr** setting, select the VISCA address value.
3. For the **Visca AddrFix** setting, select one of the following options:
 - **On**: To set the selected VISCA address as a fixed one.
 - **Off**: Not to use a fixed VISCA address.

When this setting is on, the 88 30 01 FF VISCA command is unavailable.

4. For the **Visca Mode** setting, select one of the following options:
 - **Paral**: To use the parallel network configuration mode for transmitting VISCA commands.
 - **Serial**: To use the serial network configuration mode for transmitting VISCA commands.
5. For the **PELCO-D Addr** setting, select the PELCO-D address value.
6. For the **PELCO-P Addr** setting, select the PELCO-P address value.
7. For the **Baud Rate** setting, select the baud rate value.

The baud rate value must correspond to the selected address. For example, if you set the VISCA address as 1, you must set baud rate to 9600.

8. For the **USB Mode** setting, select one of the following options:
 - **isoc**: To use the isochronous USB transfer type. For example, you can use the isochronous transfer type for streaming video in real time.
 - **bulk**: To use the bulk USB transfer type. This transfer type prevents data loss but might increase the bandwidth.
9. For the **USB 3.0 Function** setting, select one of the following options:
 - **UVC**: To enable the USB 3.0 Video Device Class (UVC) function, for example, for video streaming.
 - **HOST**: To enable the USB 3.0 Host function for receiving data.
10. For the **DHCP** setting, select one of the following options:
 - **On**: To use a dynamic IP address assignment.

- **Off**: To assign an IP address manually.
11. Select **Back** to return to the main menu.

Viewing camera details

About this task

You can view general camera information from the OSD menu, such as the system on a chip (SoC) version, camera model, lens type, and NDI license status.

Procedure

On the main menu, select **Version**.

The OSD menu displays the Version menu with the camera details.

Performing a factory reset

About this task

Restore all updated OSD menu settings to the factory default values using the Default menu.

If you selected static IP assignment on the Communication Setup menu, you cannot restore the default IP settings from the OSD menu. To do that, you need to restore the default configuration from the web interface or press * + # + **Manual** on the remote control.

Procedure

1. On the main menu, select **Default**.
2. For the **Default** setting, press **Home** on the remote control.
3. Select **Back** to return to the main menu.

Chapter 5: Camera configuration in the web interface


With the web interface, you can remotely adjust camera settings and monitor video in real time.

The web interface is available from a Google Chrome browser. You must enter the camera IP address in Google Chrome to access the web interface Login page.

You can also use the web interface during the initial setup to configure basic settings, such as network connection and camera orientation. For more information about configuring AI tracking from the web interface, see [AI tracking](#) on page 58.

The web interface Home page has the following areas:

- The video frame for real-time monitoring.
- The side pane with menu options and parameters to customize the camera settings.

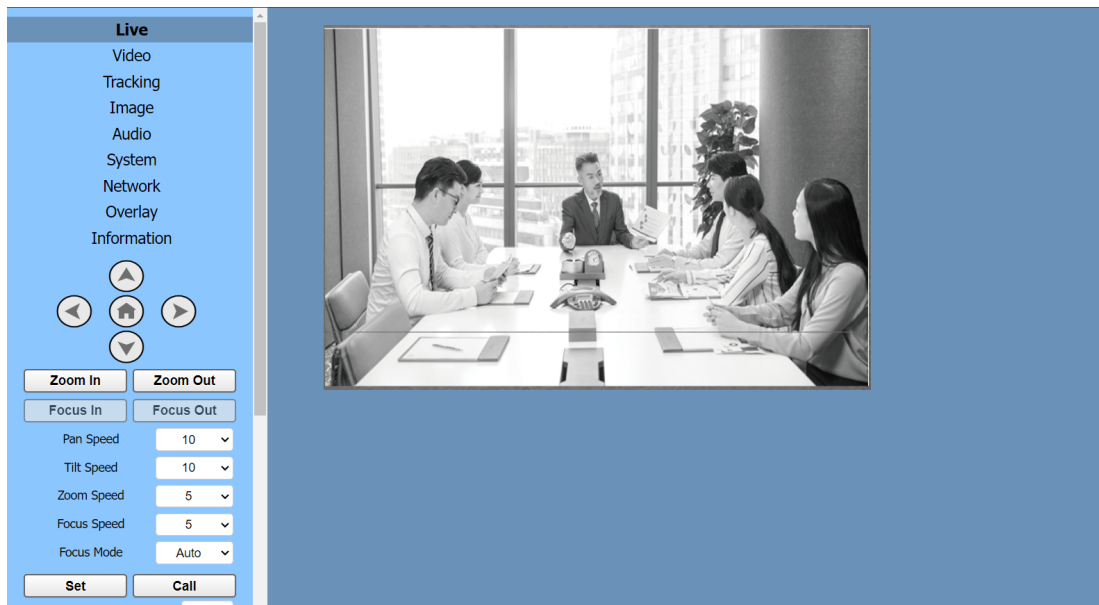

Accessing the web interface

About this task

You can access the web interface from a Google Chrome browser using the camera IP address. After logging in to the web interface, you can see the Home page with the live video area and a side pane with settings.

You can change the default username and password after the first login.

Before you begin

Ensure you have the following details:

- The camera IP address to access the web interface. You can view the current IP address by pressing ***+ # +4** on the remote control.
- The web interface username and password. You can obtain the default username and password from the release notes.

Procedure

1. To access the web interface Login page, open the Google Chrome browser and enter the camera IP address in the following format: `http://<IP address>`.
2. On the Login page, enter your username and password.
3. Click **Sign In**.

Selecting the web interface language

About this task

You can change the language of the web interface menu before configuring the camera settings.

Pan, tilt, and zoom settings are reset to the default values as part of the language updates. If you want to restore customized PTZ configuration, you need to do it manually from the web interface side pane.

Procedure

1. In the web interface side pane, scroll down to the **Language** list.
2. From the **Language** list, select the web interface language.

The web interface language changes automatically.

Changing the web interface password

About this task

You can change the default password after the first login for security purposes. The changes apply the next time you log in to the web interface after updating the password. You cannot update the username. The username corresponds to one of the available user roles: administrator and guest.

The password must contain from 8 to 16 characters, including numbers, lowercase, uppercase, and special characters, such as @ \$! % * ? & #.

Procedure

1. In the web interface side pane, click **System**.
2. Click the **User** tab.
3. From the **UserName** list, select the user to update.
4. In the **Old Passwd** field, type the current password.
5. In the **Passwd** and **Confirm Passwd** field, type the new password.
6. Click **Submit**.

Configuring pan, tilt, and zoom

About this task

Configure pan, tilt, and zoom (PTZ) settings to manage camera vertical and horizontal movements. You can also adjust the focus settings and determine at what speed the camera can zoom in and out.

Before you begin

Ensure you disabled AI tracking to make the side pane **Up**, **Down**, **Left**, and **Right** buttons active. You can disable AI tracking from the Tracking section in the web interface side pane.

Procedure

1. In the web interface side pane, use the **Up**, **Down**, **Left**, and **Right** buttons to adjust the video frame.
2. Use the **Zoom In** and **Zoom Out** buttons to focus on particular details or capture more objects in the frame.
3. In the **Pan Speed** field, type a value to determine how quickly the camera moves horizontally.
4. In the **Tilt Speed** field, type a value to determine how quickly the camera moves up and down.
5. In the **Zoom Speed** field, type a value to determine how quickly the camera zooms in and out.

6. In the **Focus Speed** field, type a value to determine how quickly the camera focuses on objects.
7. From the **Focus Mode** list, select one of the following options:
 - **Auto**: The camera automatically adjusts the focus settings.
 - **Manual**: You can set the focus manually.
8. If you enabled manual focus mode, use the **Focus In** and **Focus Out** buttons to adjust the camera focus.

Saving the presets for pan, tilt, and zoom

About this task

You can save the current configuration of pan, tilt, and zoom (PTZ) and focus settings and associate it with a number to recall this configuration quickly when required. You can save a maximum of 255 PTZ presets.

In the web interface side pane, you can enter the preset number and click **Call** to recall the saved PTZ configuration. On the remote control, you can press a number button from 0 to 9 to recall the corresponding PTZ configuration.

Procedure

1. In the web interface side pane, scroll down to the **Preset** field.
2. In the **Preset** field, type a number between 0 and 254.
3. Click **Set** to associate the current PTZ and focus configuration with the number.
4. To recall the saved PTZ configuration, in the **Preset** field, type the preset number and click **Call**.

Configuring audio settings

About this task

On the Audio menu, you can manage camera audio settings, such as audio type, sample rate, bitrate, input type, and other options. You can also enable the Audio Data Transport Stream (ADTS) protocol to stream AAC audio.

Procedure

1. In the web interface side pane, click **Audio**.
2. On the Audio Settings page, from the **Audio Switch** list, select one of the following options:
 - **On**: To enable the audio channel.

- **Off**: To disable the audio channel.
3. From the **Audio Type** list, select the audio output type.
 4. From the **Sample Rate** list, select how many times per second to sample a wavelength for creating a digital signal.

With a higher sample rate, you can capture a wider range of frequencies.
 5. From the **Bit Rate** list, select the bitrate value.

The bitrate value controls the amount of audio data processed over a period of time. A higher bitrate provides better audio quality.
 6. From the **Input Type** list, select one of the following options:
 - **LINE IN**: To enable a line-in input. The line-in input is a high-level stereo signal.
 - **MIC**: To enable a microphone input. The microphone input is a low-level mono signal.
 7. From the **Input Vol L** list, select the volume level for the left audio channel.
 8. From the **Input Vol R** list, select the volume level for the right audio channel.
 9. Click **Submit**.

Configuring video settings

About this task

You can configure video settings, such as the output type, video format, encoding parameters, and frame rate. By adjusting video settings, you can manage video characteristics, including clarity, smoothness, level of detail, and resolution.

Procedure

1. In the web interface side pane, click **Video**.
2. From the **Video Format** field, select one of the following options:
 - **50Hz**
 - **60Hz**
 - **Dial Priority**: The camera uses the video resolution value that you manually set on the System Select rotary switch on the back panel.

For more information about the video resolution values that you can manually set, see the Overview chapter.
3. From the **Encode Level** list, select one of the following options:
 - **baseline**: To use the basic form of encoding.

You can use this encode level for older mobile devices.
 - **mainprofile**: To use an enhanced form of encoding to obtain a higher video quality with a smaller file size.

You can use this encode level for most modern devices and web streaming.

- **highprofile**: To use an advanced form of encoding to obtain the highest video quality with the smallest file size.

You can use this encode level for long-term video storage.

- **svc-t**: To use Scalable Video Coding (SVC) Extension for WebRTC.

The SVC-T encode level reduces the network bandwidth, eliminates transcoding, and simplifies storage management.

4. In the First Stream section, from the **Encode Protocol** list, select one of the following options:
 - **H264**: To use a balanced solution between video quality and compression rate.
 - **H265**: To use better video quality with a lower compression rate.
 - **MJPEG**: To use the highest video quality with the lowest compression rate.
5. From the **Resolution** list, select the video resolution for the stream.
6. If you selected H.264 or H.265 as the encode protocol, in the **Bit Rate** field, type a value to set the bit rate for adjusting image clarity.

The bit rate must correspond to the available network bandwidth. If the bit rate exceeds the bandwidth capacity, you might experience poor video quality.
7. If you selected MJPEG as the encode protocol, in the **Qfactor** field, type a quality level value.
8. From the **Frame Rate** list, select a frame rate value.

A higher frame rate makes video images smoother.
9. If you selected H.264 or H.265 as the encode protocol, in the **I Key Frame Interval** field, type a value to set the interval between two intra-frames (I-frames).

A bigger interval reduces the level of detail in your video. A smaller interval captures more details but reduces the bandwidth.
10. If you selected H.264 or H.265 as the encode protocol, from the **Bit Rate Control** list, select one of the following options:
 - **CBR** (Constant Bit Rate): A video codec encodes video at the preset speed.
 - **VBR** (Variable Bit Rate): A video codec adjusts the encoding speed based on the preset speed to get the best image quality.
11. Repeat the steps to configure video settings in the Second Stream section.
12. Click **Submit**.

Image configuration

On the Image tab, you can configure video image settings, such as exposure, color, auto focus, noise reduction, and global image settings. You can determine how bright or dark your video looks, adjust the white balance and the related color settings, and manage video orientation. You can also set up auto focus by selecting the default frame area in focus and the level of sensitivity. With the 3D Noise Reduction feature, you can eliminate noise reduction in static scenes.

Configuring exposure settings

About this task

Configure exposure to determine how bright or dark your video looks by adjusting the amount of light that reaches the camera sensor. Exposure ensures the video is not too bright or dark and helps to capture details in different lighting conditions.

Procedure

1. In the web interface side pane, click **Image**.
2. On the Exposure tab, select the exposure mode and configure the corresponding settings.
3. Click **Submit**.

Exposure tab settings

The following table lists the settings available on the Exposure tab and provides their description:

Setting name	Description
Exposure Mode	You can select one of the following exposure modes: • Auto: The camera automatically determines the exposure settings. • Manual: To set up iris, shutter, gain, and DRC (Dynamic Range Compression) settings manually. • SAE: To select Shutter Automatic (SAE) mode and set the shutter time manually. • AAE: To select Aperture Automatic (AAE) mode and set the size of the iris opening. The camera automatically determines the shutter settings. • Bright: To adjust the brightness level manually.
Flicker Mode	You can disable the anti-flicker setting or select one of the options. Use this setting to record high-quality video under artificial flickering lighting. This setting is available in Auto, AAE, and Bright modes.
Backlight	Enable the backlight compensation if there is light behind the object and the object becomes dark. This setting is available in Auto and AAE modes.
Bright	Use the slider to adjust the level of brightness. This setting is available in Bright mode.

Table continues...

Setting name	Description
DRC	Use the slider to determine the level of Dynamic Range Compression (DRC). This setting is available when the DRC mode is set to Manual . The DRC setting reduces the dynamic image range by taking out the darkest and lightest parts.
DRC Mode	You can select one of the following options to determine Dynamic Range Compression (DRC) mode: • Auto: The camera automatically determines the DRC setting. • Off: The camera does not use dynamic range compression. • Manual: You can use the slider to determine the DRC level. This setting is available in all modes.
Expcomp	Use the slider to select an exposure compensation value. This setting is available when Exposure Compensation mode is on.
Expcomp Mode	You can enable Exposure Compensation mode to manually manage the exposure setting. This setting is available in Auto and AAE modes.
Gain	Use the slider to manage the level of artificial brightness and contrast that the camera automatically adds to the image. This setting is available in Manual mode.
Gain Limit	Use the slider to specify the maximum level of gain. Gain is the brightness and contrast that the camera automatically adds to the image. This setting is available in Auto, SAE, AAE, and Bright modes.
Iris	Select the number of f-stops to control how open the camera iris is. For example, if you select 1.8 f-stops, you can get the brightest video image with the lowest depth of field. This setting is available in Manual and AAE modes.
Metering Mode	You can select one of the following options to determine the image area from which the camera takes samples for checking the level of lighting: • Average: The camera takes samples from multiple areas in the image and calculates the average value. • Bottom: The camera takes samples from the image bottom. • Center: The camera takes samples from the image center. • Top: The camera takes samples from the image top. This setting is available in Auto, AAE, and Bright modes.
Shutter	Select the amount of time per second per frame during which the camera sensor is exposed to light. This setting is available in Manual and SAE modes.

Configuring color settings

About this task

Configure color settings to adjust the white balance mode, saturation, hue, and other settings. They help to ensure accurate color reproduction and enable you to customize the visual style of your video.

Procedure

1. In the web interface side pane, click **Image**.
2. Click the **Color** tab.
3. On the Color tab, select the white balance mode and configure the corresponding settings.
4. Click **Submit**.

Color tab settings

The following table lists the settings available on the Color tab and provides their description:

Setting name	Value
WB Mode	You can select one of the following white balance modes: • Auto: Use this mode to automatically determine the RGB range values. • Indoor: Use this mode for recording indoor events, such as conferences. • Outdoor: Use this mode for recording outdoor events. • Manual: Use this mode to manually set the RGB range values. • One Push: Use this mode to manually set the white balance with a white object. For example, after selecting this mode, place a white sheet of paper within the camera frame and click the Update icon. The camera uses the new white color reference instead of the internal one and calculates all other color settings. • VAR: Use this mode to manually adjust the color temperature.
AWB Sens	You can select one of the following options to determine the level of automatic white balance sensitivity: • Low • Middle • High This setting is available in Auto mode.
BG	Use the slider to select a value for the blue and green color range. This setting is available in Manual and One Push modes.

Table continues...

Setting name	Value
BG Tuning	Use the slider to adjust the blue and green color balance. This setting is available in Auto, Indoor, Outdoor, One Push, and VAR modes.
Color Temp	Use the slider to select a color temperature value in Kelvins (K). A higher color temperature corresponds to cooler, more bluish shades. This setting is available in VAR mode.
Hue	Use the slider to select the dominant video color. This setting is available in all modes.
RG	Use the slider to select a value for the red and green color range. This setting is available in Manual and One Push modes.
RG Tuning	Use the slider to adjust the red and green color balance. This setting is available in Auto, Indoor, Outdoor, One Push, and VAR modes.
Saturation	Use the slider to adjust the level of color intensity. This setting is available in all modes.

Configuring image settings

About this task

Configure image settings to adjust video quality. You can make video brighter or darker, enhance or soften details, set colors to be more vibrant or muted, and make other adjustments.

Procedure

1. In the web interface side pane, click **Image**.
2. Click the **Image** tab.
3. Use the **Brightness** slider to adjust the level of image brightness.
4. Use the **Contrast** slider to determine the level of image contrast.
5. For the **Sharpness Mode** setting, select one of the following options:
 - **Auto**: The camera automatically determines the level of image sharpness.
 - **Manual**: You can determine the level of image sharpness with a slider.
6. If you selected manual sharpness mode, use the **Sharpness** slider to adjust the level of image sharpness.
7. For the **Gamma Mode** setting, select one of the following options:
 - **Auto**: The camera automatically determines the gamma value.
 - **Manual**: You can manually select the gamma value.

8. If you selected manual gamma mode, from the **Gamma** list, select one of the following options:

- A numerical value
- **Exp**
- **HLG**

The gamma setting determines how smoothly black transitions to white and the overall brightness of gray tones.

9. For the **Flip-V** setting, select one of the following options:

- **On**: To invert the video image vertically.
- **Off**: To display the original video image.

10. For the **Flip-H** setting, select one of the following options:

- **On**: To invert the video image horizontally.
- **Off**: To display the original video image.

11. Click **Submit**.

Configuring auto focus settings

About this task

You can select a frame area that the camera automatically focuses on, adjust the level of auto focus sensitivity, and enable image freeze.

Procedure

1. In the web interface side pane, click **Image**.
2. Click the **Focus** tab.
3. From the **AF Region** list, select the frame area for auto focus.

The camera automatically focuses on the objects within the selected area.

4. From the **AF Sens** list, select the level of auto focus sensitivity.

A higher value corresponds to a slower auto focus response. For example, if you select **High** and something passes between the object in focus and the camera, you are less likely to lose focus on the object.

5. For the **AF Limit** setting, select one of the following options:

- **On**: To set a near and far distance limit for auto focus.
- **Off**: To disable auto focus distance limit.

6. If you enabled auto focus limit, for the **Near Limit** setting, select the near distance limit to focus the camera.

7. If you enabled auto focus limit, for the **Far Limit** setting, select one of the following options:
 - A numeric value for the far distance limit in meters.
 - **INF**: To disable auto focus limit for far distances.
8. Click **Submit**.

Configuring noise reduction

About this task

2D Digital Noise Reduction (DNR) is a form of temporal noise reduction which analyzes every pixel in the frame sequentially and looks for inconsistent pixels to repair them. You can use 2D DNR for basic noise reduction in low-resolution static video.

3D Digital Noise Reduction (DNR) is based on spacial noise reduction which compares the pixels in each frame individually and then compares these frames to each other. You can use 3D DNR for noise reduction in high-resolution video with motion and in low lighting conditions.

Procedure

1. In the web interface side pane, click **Image**.
2. Click the **Noise Reduction** tab.
3. For the **NR-2D Mode** setting, select one of the following options:
 - **Auto**: The camera automatically selects the 2D noise reduction level.
 - **Manual**: You can manually select the 2D noise reduction level.
4. If you selected Manual mode, use the **NR-2D** slider to select the level of 2D noise reduction.
5. For the **NR-3D Mode** setting, select one of the following options:
 - **Auto**: The camera automatically selects the 3D noise reduction level.
 - **Manual**: You can manually select the 3D noise reduction level.
6. If you selected Manual mode, use the **NR-3D** slider to select the level of 3D noise reduction.
7. Click **Submit**.

Configuring image style

About this task

On the Style tab, you can select the style of your video image. You can use one of the default options or a custom style that you configured on the OSD Image menu. When you select a style, you automatically determine a group of image settings, such as brightness, contrast, sharpness, gamma, and other settings.

Procedure

1. In the web interface side pane, click **Image**.

2. Click the **Style** tab.
3. From the **Style** list, select one of the default or custom options.
4. Click **Submit**.

Network configuration

On the Network tab, you can configure local network settings for your camera so that it can communicate with other devices in the network and manage data transmission. You can configure global network settings, ports, protocols for streaming and data exchange, and time synchronization. You can disable the protocols that are not in use and determine which protocols to use for the first or second audio and video streams.

Configuring LAN settings

About this task

Connect your camera to the local area network (LAN) and configure the settings. If you allocate a fixed IP address to the camera, you must also specify a subnet mask, default gateway, and DNS address. You cannot modify the MAC address, this field is for information only.

Procedure

1. In the web interface side pane, click **Network**.
2. On the Lan Settings tab, from the **IP Configuration Type** list, select one of the following options:
 - **Dynamic IP Address**: The DHCP server automatically assigns the camera IP address and you do not need to configure other LAN settings.
 - **Fixed IP Address**: Select this option if you have an allocated IP address for the camera and want to configure LAN settings manually.
3. If you select fixed IP assignment as the configuration type, in the **IP Address** field, type the allocated IP address for the camera.
4. In the **Subnet Mask** field, type the subnet mask address.
5. In the **Gateway** field, type the default gateway IP address.
6. In the **DNS Address** field, type the DNS server IP address.
7. Click **Submit**.

Configuring port settings

About this task

You can change the default port numbers that the camera uses to communicate with other devices through RTSP, TCP/IP, and UDP protocols to enhance network security.

Procedure

1. In the web interface side pane, click **Network**.
2. Click the **Port Settings** tab.
3. In the **RTSP Port** field, type the port number.

The camera supports the RTSP protocol and uses the VideoLAN Server (VLS) streaming solution.

4. In the **TCP Port** field, type the TCP port number.
5. In the **UDP Port** field, type the UDP port number.
6. Click **Submit**.

Configuring RTMP settings

About this task

You can enable and use the Real-time Messaging Protocol (RTMP) for streaming your audio and video. The camera captures audio and video, then the RTMP encoder breaks them down into data packets and sends to a streaming server, which transforms the received data for live streaming. You can enable RTMP for either or both streams and send only video or audio data if necessary.

Procedure

1. In the web interface side pane, click **Network**.
2. Click the **RTMP(S) Settings** tab.
3. Select one of the following options for the first and second streams:
 - **On**: To enable and use RTMP.
 - **Off**: To disable RTMP.
4. Select both or one of the following check boxes for the first and second streams:
 - **Video**: To use RTMP for streaming only video data.
 - **Audio**: To use RTMP for streaming only audio data.
5. In the **MRL** field, type the URL of the streaming server.

For example, if you are using YouTube as the streaming platform, you can get the URL from YouTube Live Control Room.

6. Click **Submit**.

Configuring SRT settings

About this task

Secure Reliable Transport (SRT) is an open-source protocol that provides data encryption, packet loss recovery, and jitter prevention for an enhanced video streaming quality. You can enable and use SRT to optimize video streaming performance in unpredictable networks. The SRT protocol

supports the Advanced Encryption Standard (AES), and you can determine the key length to manage the security level.

Procedure

1. In the web interface side pane, click **Network**.
2. Click the **SRT Settings** tab.
3. For the **SRT** setting, select one of the following options:
 - **On**: To enable and use the SRT protocol.
 - **Off**: To disable the SRT protocol.

4. From the **SRT Mode** list, select one of the following options:
 - **Caller**: The camera opens the client connection with the SRT server.
 - **Listener**: The camera listens to incoming connections.

Caller and listener modes work together to establish the SRT link between an SRT source and destination device. You must ensure that one device is in Listener mode and the other is in Caller mode.

5. If you selected Caller mode, in the **SRT Server** field, type the SRT server IP address.
6. In the **SRT Port** field, type the SRT port number.
7. From the **SRT Encryption** list, select one of the following:
 - **None**: To disable AES encryption.
 - One of the types of AES encryption.

If AES encryption is enabled, only authorized users have access to the transmitted stream. A longer key length provides better data protection, but it takes more time to execute.

8. In the **SRT Password** field, type the SRT encryption password.
9. In the **SRT Bandwidth Overhead** field, type the value for the extra bandwidth to resend packets in case of data loss.
10. In the **SRT Variable Latency** field, type the number of milliseconds to add to the SRT stream latency.

A higher latency value gives more time to buffer packets and resend lost data.

11. If you selected Caller mode, in the **SRT StreamId** field, type the stream ID that the SRT caller shares with the SRT listener when establishing a connection.

The maximum value length is 512 characters. The stream ID starts with the following executable specification characters: # ! .

12. Click **Submit**.

Configuring RTSP authentication

About this task

If you are streaming video from a remote location, you can enable the Real-Time Streaming Protocol (RTSP) authentication to protect your footage from unauthorized access. If RTSP authentication is enabled, only authorized devices or a proxy server can access the camera feed.

Procedure

1. In the web interface side pane, click **Network**.
2. Click the **RTSP Settings** tab.
3. For the **RTSP Auth** setting, select one of the following options:
 - **On**: To enable and use RTSP authentication.
 - **Off**: To disable RTSP authentication.
4. Click **Submit**.

Configuring ONVIF settings

About this task

You can use the Open Network Video Interface Forum (ONVIF) protocol to allow your camera to communicate with other devices from different manufacturers. You can also enable ONVIF authentication to access your video footage remotely from authorized devices.

Procedure

1. In the web interface side pane, click **Network**.
2. Click the **ONVIF Settings** tab.
3. For the **ONVIF** setting, select one of the following options:
 - **On**: To enable and use the ONVIF protocol.
 - **Off**: To disable the ONVIF protocol.
4. For the **ONVIF Auth** setting, select one of the following options:
 - **On**: To enable ONVIF authentication.
 - **Off**: To disable ONVIF authentication.
5. Click **Submit**.

Configuring multicast settings

About this task

You can enable multicasting for streaming your video and specify the multicast port number and IP address. For example, you can use multicasting when multiple users access the same video source. You can reduce the network traffic by enabling multicasting in this case as the camera sends only one copy of the video stream using the specified IP address.

Procedure

1. In the web interface side pane, click **Network**.
2. Click the **Multicast Settings** tab.
3. For the **Multicast** setting, select **On** to enable multicasting.
4. In the **Address** field, type the multicast address.
5. In the **Port** field, type the multicast port number.
6. Click **Submit**.

Configuring FreeD settings

About this task

FreeD is a commonly used protocol to exchange camera tracking data. FreeD covers all eight axes of camera movement and sends position, rotation, and lens data in UDP packets over the network. For example, you can enable and use the FreeD protocol to integrate your tracking data with a virtual reality (VR) or augmented reality (AR) solution.

Procedure

1. In the web interface side pane, click **Network**.
2. Click the **FreeD Settings** tab.
3. For the **FreeD Data Output(Beta)** setting, select one of the options:
 - **On**: To enable and use the FreeD protocol.
 - **Off**: To disable the FreeD protocol.
4. In the **Destination IP** field, type the IP address where the camera sends the FreeD encrypted data.
5. In the **Control Port** field, type the port number to transmit the FreeD encrypted data.
6. In the **Data Port** field, type the port number to receive the FreeD encrypted data.
7. Click **Submit**.

Configuring NTP settings

About this task

Configure the Network Protocol Time (NTP) settings to synchronize the camera time with other devices in the network. You need to specify the IP address of an NTP server, select the time zone to use, and set the time interval at which the camera queries the time and status from the NTP server.

The camera displays the time that you configure with other metadata if you enable video overlay. Before streaming your video, you must ensure that the time is set correctly so that remote participants can see each other's time zones.

Procedure

1. In the web interface side pane, click **Network**.
2. Click the **NTP Settings** tab.
3. For the **NTP Time Sync** setting, select one of the following options:
 - **On**: To enable and use NTP time synchronization.
 - **Off**: To disable NTP time synchronization.
4. From the **Time Zone** list, select the time zone to use.
5. In the **Server Address** field, type the NTP server IP address.
6. In the **Time Interval(min)** field, type the time interval to check the NTP server time and status.
7. Click **Submit**.

Configuring NDI settings

About this task

Network Device Interface (NDI) is a video connectivity standard based on which multimedia systems can identify one another and communicate using the IP protocol. With NDI, you can encode, transmit, receive high-quality, low latency video and audio, and exchange metadata in real time. NDI offers a range of compression options to address different use cases, including full NDI. You can obtain NDI tools from [the NDI official website](#).

Before you begin

Ensure you have purchased an NDI HX license from the NDI official website and have a license key. You need a separate NDI HX license for each camera.

Procedure

1. In the web interface side pane, click **NDI® Config**.
2. On the NDI® Settings page, for the **Full NDI®** setting, select one of the following options:
 - **On**: To enable full NDI compression functionality.
 Full NDI is the original NDI compression option that provides full-bandwidth video transmission without data loss.
 - **Off**: To disable full NDI.
3. In the **Key** field, type the NDI HX license key.
4. In the **NDI® Local Device Channel** field, type the name of the NDI device channel.
5. In the **NDI® Receive Group** field, type the name of the group that can receive the device channel.

With NDI Access Manager, you can distribute your NDI channels into groups, select the groups that are available to your device and the groups that can receive your NDI channels.

6. From the **Enable NDI® Discovery Server** list, select one of the following options:
 - **On**: To enable NDI Discovery Server mode.
 - **Off**: To disable NDI Discovery Server mode.
7. If you enabled NDI Discovery Server mode, in the **NDI® Discovery Server** field, type the server IP address.
8. From the **Enable NDI® Multicast Server** list, select one of the following options:
 - **On**: To enable NDI multicasting.
 - **Off**: To disable NDI multicasting.
9. If you enabled NDI multicasting, in the **NDI® Multicast Address** field, type the multicast server IP address.
10. If you enabled NDI multicasting, in the **NDI® Multicast Mask** field, type the multicast mask address.
11. If you enabled NDI multicasting, in the **NDI® Multicast TTL** field, type a multicast Time to Live (TTL) value.

Only multicast packets with a TTL greater than the threshold of the interface are forwarded.
12. Click **Submit**.

Configuring overlay settings

About this task

You can add the current time and title to display on top of the video and configure their position. For example, if you are streaming an online conference, you might need to display local time for the attendees from other time zones. You can also display a video title or other metadata such as location.

Before you begin

Ensure you have configured the Network Time Protocol (NTP) settings on the Network tab to display the video time correctly.

Procedure

1. In the web interface side pane, click **Overlay**.
2. To display the current time on top of the video, select the **Time Enable** check box.
3. To display the title on top of the video, select the **Title Enable** check box.

4. In the **Title** field, type the video title or other metadata to display on top of the video.
5. For the **Horizontal Position** setting, select the relative horizontal position of the video title and time.

A value of 0 corresponds to the leftmost position, and a value of 100 corresponds to the rightmost position.
6. For the **Vertical Position** setting, select the relative vertical position of the video title and time.

A value of 0 corresponds to the topmost position, and a value of 100 corresponds to the bottommost position.
7. Click **Submit**.

Viewing camera details

About this task

You can view general camera information from the web interface, such as the device ID and type, software and web interface version, and serial number.

Procedure

In the web interface side pane, click **Information**.

The web interface displays the Information page with the camera details.

Performing a factory reset

About this task

You can restore all updated web interface settings to the factory default values from the System tab.

Procedure

1. In the web interface side pane, click **System**.
2. On the Initialize tab, click **Factory Default**.
3. In the confirmation window, click **OK**.

Rebooting the camera software

About this task

You can reboot the camera software remotely from the System tab of the web interface. You must manually reboot the camera after updating certain web interface settings to apply the changes. When submitting the updated configuration, you can see a notification about the required reboot.

Procedure

1. In the web interface side pane, click **System**.
2. On the Initialize tab, click **Reboot**.
3. In the confirmation window, click **OK**.

Downloading the upgrade file

About this task

Download the latest upgrade file for the camera software from the Avaya Support site. After downloading, upload the file to the web interface to apply the updates.

Before you begin

- Ensure that you are using the Google Chrome browser.
- Obtain your credentials for the Avaya Support site. For more information about the credentials, contact Avaya Support.

Procedure

1. In your browser, go to <https://support.avaya.com/>.
2. At the top of the page, click **Sign In** and enter your username and password.
3. Click **Software Downloads**.
4. In the **Search Product** field, enter the camera product name.
5. In the **Choose Release** list, select the release number.
6. Locate and click the upgrade archive.
7. On the Downloads page, review the summary and download the archive to your computer.

Next steps

Unpack the archive, go to the web interface, and upload the upgrade file.

Updating the camera software

About this task

On the web interface, upload the upgrade file that you downloaded from the Avaya Support site to update the camera software. You can upload only `.img` files. After uploading the file, the camera updates and reboots automatically.

Before you begin

Ensure you download and unpack the archive with the upgrade file from the Avaya Support site.

Procedure

1. In the web interface side pane, click **System**.
2. Click the **Online Upgrade** tab.
3. Click **Select file from your computer**.
4. In the file explorer, navigate to the folder with the downloaded file and select it.
5. Click **Submit**.

Chapter 6: AI tracking

With AI tracking, you can track a person, a group of people, or a particular zone without moving the camera and manually adjusting the settings. The camera follows the tracked person, group of people, or zone based on the configured mode.

The camera provides the following AI tracking modes:

- **Presenter:** The camera tracks a person. You can use this mode during live presentations in conference rooms. If there are several people in the frame, you can select the person to track with the remote control arrow buttons.
- **Zone:** The camera tracks a predefined zone. You can define up to four zones to track. The camera follows the presenter when they leave the tracked zone and moves to the adjacent zone. If the camera does not locate the presenter, it returns to the default zone. You can use this mode when there are several distinct zones and the presenter is moving between them, for example, between the central stage and its sides.
- **Auto Frame:** The camera optically analyzes a larger area but digitally zooms in on a person or a group of people in that area. When the number of participants changes, the camera adjusts the frame accordingly.

You can switch between AI tracking modes using the remote control, On Screen Display (OSD) menu, and web interface.

You can enable and configure AI tracking using the following methods:

- **OSD menu settings:** Use this method to quickly enable the feature and select the tracking mode.
- **Web interface settings:** Use this method to enable the feature and access more advanced settings for each tracking mode.

Configuring AI tracking from the OSD menu

About this task

Configure AI tracking in the OSD menu to enable or disable the feature and select the tracking mode. You can switch between Presenter, Auto Frame, and Zone modes to track a person, a group of people, or one of the predefined zones. For more advanced mode settings, access the camera web interface.

Procedure

1. On the main menu, for the **Tracking** setting, select one of the following options:
 - **Presenter**: To track a person within the frame.
If there are several people present in the frame, you can select the person to track with the remote control arrow buttons.
 - **Auto Frame**: To track a person or a group of people within the frame.
The camera optically analyzes a larger area but digitally zooms in on a person or a group of people in that area. When the number of participants changes, the camera adjusts the frame accordingly.
 - **Zone**: To track one of the predefined zones.
You define tracking zones on the web interface Tracking page.
 - **Off**: To disable AI tracking.
2. If you selected Presenter mode, for the **Figure Size** setting, select one of the following figure sizes:
 - **Full**: For entire body tracking.
 - **Half Body**: For tracking above the upper part of the body.
 - **Close Up**: For tracking above the shoulders.
 - **Custom**: For using the custom setting configured on the web interface Tracking page.
3. Select **Back** to return to the main menu.

Configuring Presenter mode from the web interface

About this task

From the web interface, select and configure Presenter mode to track a person. The camera automatically detects a human within the frame and starts tracking them. If there are several people in the frame, you can select the person to track with the remote control arrow buttons.

When configuring Presenter mode, you can determine the figure size, camera position, zoom and tilt, video alignment, and other settings. The web interface automatically saves the AI tracking configuration as you change the settings.

Procedure

1. In the web interface side pane, scroll down to the Tracking section.
2. For the **Track** setting, select **Off**.
3. From the **Mode** list, select **Presenter**.
4. **(Optional)** To display a green frame around a detected person, from the **Humanoid frame** list, select **Default**.

5. **(Optional)** To display the tracking status in the video output, for the **Tracking hint** setting, select **On**.
6. Scroll up to the top of the side pane and click **Tracking**.
The web interface displays the AI tracking configuration options under the real-time video section.
7. On the Presenter tab, select the **Auto Zoom** and **Auto Tilt** check boxes to automatically adjust camera zoom and tilt if the tracked person moves within the frame.
8. Use the **Target Retention Time** slider to determine the time the camera takes to move to the default zone after the presenter leaves the camera view.
You can select the default zone for tracking on the Zone tab.
9. In the Figure Size area, select one of the following figure sizes:
 - **Full**: For entire body tracking.
 - **Half Body**: For tracking the upper part of the body.
 - **Close Up**: For tracking above the shoulders.
 - **Custom**: For adjusting the proportion size with the slider.
10. From the **Tracking Start Position** list, select one of the following options:
 - **Current Location**: To start tracking within the current frame.
 - A preset number: To start tracking from a preset PTZ position.
11. To determine where the tracked presenter shows relative to the image center, for the **Character Position** setting, select one of the following options:
 - **Left**
 - **Middle**
 - **Right**
12. In the side pane Tracking section, for the **Track** setting, select **On**.

Configuring Zone mode from the web interface

About this task

From the web interface, select and configure Zone mode to track up to four customized areas. You can also select the default zone from which tracking starts and where the camera returns if it cannot locate the presenter.

The web interface automatically saves the AI tracking configuration as you change the settings.

Procedure

1. In the web interface side pane, scroll down to the Tracking section.

2. For the **Track** setting, select **Off**.
3. From the **Mode** list, select **Zone**.
4. **(Optional)** To display a green frame around a detected person, from the **Humanoid frame** list, select **Default**.
5. **(Optional)** To display the tracking status in the video output, for the **Tracking hint** setting, select **On**.
6. Scroll up to the top of the side pane and click **Tracking**.
The web interface displays the AI tracking configuration options under the real-time video section.
7. Click the **Zone** tab.
8. From the **Zone Setting** list, select **Zone A**.
9. In the side pane, use the pan and tilt arrow buttons to set the leftmost view for zone A.
10. Click **Save**.
11. Repeat steps 8 to 10 to configure zones B, C, and D.
When configuring, ensure that each zone overlaps with adjacent zones and set the rightmost view for zone D.
12. From the **Tracking Start Area** list, select the default zone.
The camera starts tracking with the default zone and then follows the presenter to the adjacent zones. If the camera does not locate the presenter in the currently tracked zone, it returns to the default zone.
13. In the side pane Tracking section, for the **Track** setting, select **On**.

Enabling Auto Frame mode from the web interface

About this task

If Auto Frame mode is enabled, the camera optically analyzes a larger area but digitally zooms in on a person or a group of people in that area. When the number of participants changes, the camera adjusts the frame accordingly.

You can enable Auto Frame mode from the web interface side pane. The web interface automatically saves the changes.

Procedure

1. In the web interface side pane, scroll down to the Tracking section.
2. In the Tracking section, from the **Mode** list, select **Auto Frame**.

Managing AI tracking with the remote control

About this task

Once configured, you can quickly enable an appropriate AI tracking mode with the remote control. If Presenter mode is enabled, you can also select a person to track when several people are in the frame.


Procedure

1. On the remote control, press the following buttons:
 - **F1**: To enable Auto Frame mode.
 - **F2**: To enable Zone mode.
 - **F3**: To enable Presenter mode.
2. If Presenter mode is enabled, use the remote control arrow buttons to navigate to the required target that you see in the web interface live video area.
3. On the remote control, press the **Home** button to confirm your selection.
4. Press **F4** to exit the AI tracking menu.

Chapter 7: RS232 interface

RS232 interface

The following image and table show the connectors of the RS232 cable interface and their functions:

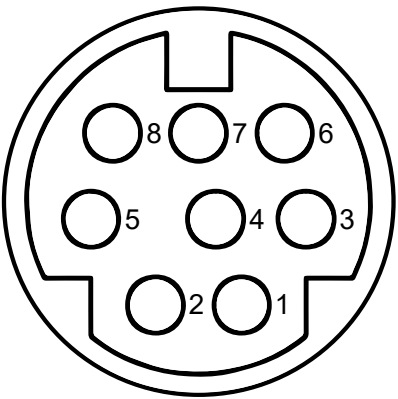

Number	Function
1.	Data Terminal Ready (DTR), the device is ready to communicate.
2.	Data Set Ready (DSR), the device is ready to communicate.
3.	Transmit Data (TxD), transmits bytes out of the device.
4.	Ground (GND), ground connection.
5.	Receive Data (RxD), receives bytes into the device.
6.	Ground (GND), ground connection.
7.	IR OUT
8.	No Connection (NC)

The following table shows the correspondence between RS232 and DB-9 connectors:

RS232	DB-9
1. DTR	6. DSR
2. DSR	4. DTR
3. TXD	2. RXD
4. GND	5. GND

Table continues...

RS232	DB-9
5. RXD	3. TXD
6. GND	1. CD
7. IR OUT	7. RTS
8. NC	8. CTS
—	9. RI

The following table shows the correspondence between RS232 and a mini-DIN connector:

RS232	Mini-DIN
1. DTR	2. DSR
2. DSR	1. DTR
3. TXD	5. RXD
4. GND	4. GND
5. RXD	3. TXD
6. GND	6. GND
7. IR OUT	7. NC
8. NC	8. NC

Chapter 8: Troubleshooting

Troubleshooting video issues

The table in this section describes the causes and solutions for camera video issues, including the following conditions:

- The web interface and connected monitor do not show video output.
- The video image is jittery.

Cause	Solution
The camera is not connected to the power supply.	• Connect the camera to the power supply securely. • Check if the camera power indicator is on. • Turn on the power switch to check if the camera is self-testing.
The voltage in the power grid is unstable or out of the required range.	Check if the voltage in your power grid is within the required range.
The cables are not connected correctly.	Check the cable connections between the video terminal, TV, and the camera to ensure proper configuration.
The camera position is unstable.	• Ensure that the camera is securely mounted in a stable position. • Check if the mounting surface is steady and can absorb vibrations.
You are not using the correct browser for managing the web interface.	Ensure that you use Google Chrome to access the web interface.

Unable to access the camera web interface

Solution

1. Run an antivirus scan on the computer to eliminate any viruses.
2. Run the **ping** command in the command line to check the communication between the computer and camera.
3. Disconnect the network for the camera and computer, then connect both the devices to the network separately.
4. Reset the computer IP address to ensure a clean connection.

5. On the remote control, press ***+ # +MANUAL** to refresh the IP address when using DHCP.
6. Ensure that the IP address, subnet mask, and gateway settings for the camera are correct.
7. Verify that there are no conflicting MAC addresses within the network.
8. Use the camera IP address with the default username and password to access the web interface.

You can obtain the default username and password from the release notes.

The remote and serial port controls do not connect to the camera

Solution

1. Check the remote control battery and replace it if required.
2. Verify that the camera is set to the appropriate mode for remote control operations.
3. Check the settings to ensure that the address of the remote control matches the corresponding setting on the camera.
4. Verify and adjust the protocol, IP address, and baud rate settings on the camera to match the serial port settings.
5. Ensure that the network devices are securely connected and that there are no loose connections or damaged cables.

Chapter 9: Resources

Documentation

Avaya Room System C100 Series customer documentation is available in HTML and PDF format on the [Avaya Documentation Center](#) and [Avaya Support](#) website.

Title	Use this document to:	Audience
Administering		
<i>Installing and Administering Avaya Room System C100 Series</i>	Perform initial installation and administration tasks from the codec GUI menu and web interface.	End users and administrators
Using		
<i>Using Avaya Room System C100 Series</i>	Set up and use Avaya Room System C130, Avaya Room System C170, and Avaya Room System C190.	End users
<i>Avaya Room System C130 Quick Start Guide</i>	Obtain an overview of features and use Avaya Room System C130.	End users
<i>Avaya Room System C170 Quick Start Guide</i>	Obtain an overview of features and use Avaya Room System C170.	End users
<i>Avaya Room System C190 Quick Start Guide</i>	Obtain an overview of features and use Avaya Room System C190.	End users
<i>Using Avaya Room Camera RC212 and Avaya Room Camera RC220</i>	Set up and use Avaya Room Camera RC212 and Avaya Room Camera RC220.	End users
<i>Using Avaya Room Camera RC240</i>	Set up and use Avaya Room Camera RC240.	End users
<i>Using Avaya Room Microphone RM61 and RM61-EXP</i>	Set up and use Avaya Room Microphone RM61 and Avaya Room Expansion Microphone RM61-EXP.	End users
<i>Using Avaya Room Microphone Speaker RA63</i>	Set up and use Avaya Room Microphone Speaker RA63.	End users

Avaya Documentation Center navigation

For many programs, the latest customer documentation is available on the Avaya Documentation Center website at <https://documentation.avaya.com>. Some functionality is only available when you log in to the Avaya Documentation Center. The available functionality depends on your role.

Important:

If the documentation you are looking for is not available on the Avaya Documentation Center, you can find it on the [Avaya Support website](#).

While navigating through the Documentation Center, you can click the **Avaya Documentation Center** logo at the top of the screen to return to the home page anytime. On the Avaya Documentation Center, you can do the following:

- Click **Avaya Links** in the top menu bar to access other Avaya websites, including the Avaya Support website.
- Click **Languages** () in the top menu bar to change the display language and view localized documents.
- In the **Search Documentation** field, search for keywords and click **Filter** to filter by solution category, product, or user role.

You can select multiple items in each filter category. For example, you can select a product and multiple user roles.

- Click **Library** in the top menu bar to access the complete library of documents. Use the filtering options to refine your results.
- After performing a search or accessing the library, you can sort content on the search results page. When you find the item you want to view, click it to open it.
- Use the table of contents in a document for navigation. You can also click < or > next to the document title to navigate to the previous topic or the next topic.
- Click **Share** () to share a topic by email or copy the URL.
- Download a PDF of the current topic in a document, the topic and its subtopics, or the entire document.
- Print the section you are viewing.
- Add content to a collection by clicking **Add to My Topics** (). You can add the topic and its subtopics or add the entire publication.
- View the topics in your collections. To access your collections, click your name in the top menu bar and then click **My Topics**.

You can do the following:

- Create, rename, and delete a collection.
- Set a collection as the default or favorite collection.
- Save a PDF of the selected content in a collection and download it to your computer.
- Share content in a collection with others through email.
- Receive collections that others have shared with you.
- Click **Watch** () to add a topic to your watchlist so you are notified when the content is updated or removed.

- View and manage your watchlist by clicking **Watchlist** from the top menu with your name.

You can do the following:

- Enable **Email notifications** to receive email alerts.
- Unwatch the selected content or all topics.
- Send feedback for a topic.

Finding documents on the Avaya Support website

Procedure

1. Go to <https://support.avaya.com>.
2. To log in, click **Sign In** at the top of the screen and then enter your login credentials when prompted.
3. Click **Product Support > Documents**.
4. In **Search Product**, start typing the product name and then select the appropriate product from the list displayed.
5. In **Select Release**, select the appropriate release number.
This field is not available if there is only one release for the product.
6. **(Optional)** In **Enter Keyword**, type keywords for your search.
7. From the **Select Content Type** list, select one or more content types.
For example, if you only want to see user guides, click **User Guides** in the **Select Content Type** list.
8. Click  to display the search results.

Support

Go to the Avaya Support website at <https://support.avaya.com> for the most up-to-date documentation, product notices, and knowledge articles. You can also search for release notes, downloads, and resolutions to issues. Use the online service request system to create a service request. Chat with live agents to get answers to questions, or request an agent to connect you to a support team if an issue requires additional expertise.

Using the Avaya InSite Knowledge Base

The Avaya InSite Knowledge Base is a web-based search engine that provides:

- Up-to-date troubleshooting procedures and technical tips.
- Information about service packs.
- Access to customer and technical documentation.

- Information about training and certification programs.
- Links to other pertinent information.

If you are an authorized Avaya Partner or a current Avaya customer with a support contract, you can access the Knowledge Base without extra cost. You must have a login account and a valid Sold-To number.

Use the Avaya InSite Knowledge Base for any potential solutions to problems.

1. Go to <https://support.avaya.com>.
2. To log in, click **Sign In** at the top of the screen and then enter your login credentials when prompted.
3. Click **Product Support > Products**.
4. In **Search Product**, start typing the product name and then select the appropriate product from the list displayed.
5. Select the release number, if applicable.
6. Click the **Technical Solutions** tab to view articles for resolving technical issues.

Index

A

accessing	
OSD menu settings	25
web interface	37
AI tracking	8
accessing OSD menu	58
configuring Presenter mode in web interface	59
configuring Zone mode in web interface	60
enabling with remote control	62
overview	58
audience	6
audio settings	
accessing web interface menu	39
auto focus settings	
accessing web interface menu	46
Avaya InSite Knowledge Base	69
Avaya Room Camera RC212	
dimensions	9
overview	7
physical layout	12
Avaya Room Camera RC220	
dimensions	10
overview	7
physical layout	14
Avaya support website	69

C

C100 models	
overview	7
cabling	
connection issues	65
ports	23
camera details	55
viewing from OSD menu	35
camera rebooting	56
camera self-test	23
ceiling-mounting	21
checklist	
installing camera	21
collection	
delete	67
edit	67
generating PDF	67
sharing content	67
color	
accessing OSD menu	31
OSD menu settings	31
web interface settings	44
color settings	
accessing web interface menu	44
components	8 , 12 , 14

configuring	
AI tracking	58
AI tracking from OSD menu	58
AI tracking with remote control	62
audio settings in web interface	39
auto focus settings in web interface	46
color from OSD menu	31
color in web interface	44
color settings in web interface	44
exposure from OSD menu	29
exposure in web interface	42
exposure settings in web interface	42
FreeD settings in web interface	52
image settings	42
image settings from OSD menu	32
image settings in web interface	45
image style settings in web interface	47
infrared remote control	18
LAN settings in web interface	48
multicast settings in web interface	51
NDI settings in web interface	53
network settings	48
network settings from OSD menu	34
noise reduction settings in web interface	47 , 61
NTP settings in web interface	52
ONVIF settings in web interface	51
OSD menu settings	25
overlay settings in web interface	54
port settings in web interface	48
Presenter mode in web interface	59
PTZ settings from OSD menu	27
PTZ settings in web interface	38
RTMP settings in web interface	49
RTSP authentication in web interface	51
SRT settings in web interface	49
video settings from OSD menu	26
video settings in web interface	40
Zone mode in web interface	60

connecting	
power adapter	23
connection issues	65
content	
publishing PDF output	67
searching	67
sharing	67
sort by last updated	67
watching for updates	67

D

DB-9	63
default settings	
from OSD menu	35

default settings (<i>continued</i>)		installing (<i>continued</i>)	
in web interface	55	connecting	23
device details	55	mounting	21
dimensions	9 , 10	powering on	23
document changes	6		
document purpose	6	K	
documentation center	67	KB	
finding content	67	Support site	69
navigation	67		
documentation portal	67	L	
downloading upgrades	56	LAN settings	
E		configuring in web interface	48
enabling		language	
AI tracking with remote control	62	selecting for OSD menu	25
Presenter mode in web interface	59	web interface	37
Zone mode in web interface	60	logging in	
exposure		web interface	37
accessing OSD menu	29		
OSD menu settings	29	M	
web interface settings	42	mini-DIN connector	63
exposure settings		mounting	21
accessing web interface menu	42	multicast settings	
F		configuring in web interface	51
factory reset		N	
from OSD menu	35	NDI settings	
from web interface	55	configuring in web interface	53
features	8	network settings	
finding content on documentation center	67	accessing OSD menu	34
FreeD settings		overview	48
configuring in web interface	52	noise reduction settings	
G		configuring from web interface menu	47 , 61
gravity sensor	8	NTP settings	
H		configuring in web interface	52
hardware version	55	O	
Home page	36 , 37	ONVIF settings	
I		configuring in web interface	51
image resolution	8	OSD menu	
image settings		selecting language	25
accessing OSD menu	32	viewing camera details	35
accessing web interface menu	45	OSD menu settings	
overview	42	accessing	25
image style settings		overview	25
configuring from web interface menu	47	overlay settings	
infrared remote control	18	accessing web interface menu	54
installation checklist	21	overview	
installing		AI tracking	58
		image settings	42
		network settings	48
		RC212	7

overview (continued)

RC220	7
-------------	-------------------

P

package list	8
pan, tilt, and zoom	
accessing OSD menu	27
accessing web interface menu	38
setting presets	39
password	38
physical layout	12 , 14
port settings	
configuring in web interface	48
power adapter	23
power supply issues	65
precautions	20
Presenter mode	
configuring in web interface	59
overview	58
selecting target	62
PTZ	
accessing OSD menu	27
accessing web interface menu	38
setting presets	39

R

RC212	
dimensions	9
overview	7
physical layout	12
RC220	
dimensions	10
overview	7
physical layout	14
rebooting camera	
from web interface	56
related documentation	67
remote control	8 , 18
accessing OSD menu	25
does not connect to camera	66
enabling AI tracking	62
overview	15
shortcuts	15
resolution	8
restoring default settings	
from OSD menu	35
in web interface	55
rotary switch	18 , 19
RS232	63
RTMP settings	
configuring in web interface	49
RTSP authentication	
configuring in web interface	51

S

safety guidelines	20
searching for content	67
selecting	
language for OSD menu	25
target in Presenter mode	62
sequence of installation	21
serial port control	66
setting up	
AI tracking	58
AI tracking from OSD menu	58
AI tracking with remote control	62
audio settings in web interface	39
auto focus settings in web interface	46
color from OSD menu	31
color in web interface	44
color settings in web interface	44
exposure from OSD menu	29
exposure in web interface	42
exposure settings in web interface	42
FreeD settings in web interface	52
image settings	42
image settings from OSD menu	32
image settings in web interface	45
image style settings in web interface	47
infrared remote control	18
LAN settings in web interface	48
multicast settings in web interface	51
NDI settings in web interface	53
network settings	48
network settings from OSD menu	34
noise reduction settings in web interface	47 , 61
NTP settings in web interface	52
ONVIF settings in web interface	51
OSD menu settings	25
overlay settings in web interface	54
port settings in web interface	48
Presenter mode in web interface	59
PTZ settings from OSD menu	27
PTZ settings in web interface	38
RTMP settings in web interface	49
RTSP authentication in web interface	51
SRT settings in web interface	49
video settings from OSD menu	26
video settings in web interface	40
web interface language	37
Zone mode in web interface	60
sharing content	67
shortcuts	15
signing in	
web interface	37
software version	55
sort documents	67
SRT settings	
configuring in web interface	49
style settings	

style settings (<i>continued</i>)	
configuring from web interface menu	47
support	69
System Select values	18 , 19
system settings	
configuring in web interface	38

T

target audience	6
troubleshooting	
cannot access web interface	65
remote control	66
serial port control	66
video issues	65

U

updating	
password	38
upgrades	
downloading	56
uploading	57
uploading upgrades	57

V

version	
viewing from OSD menu	35
video issues	65
video resolution	18 , 19
video settings	
configuring from OSD menu	26
configuring in web interface	40
viewing	
camera details	55
camera details from OSD menu	35
voltage issues	65

W

wall-mounting	21
watchlist	67
web interface	
accessing	37
configuring AI tracking	58–60
does not display video	65
downloading upgrades	56
FreeD settings	52
Home page	36
image settings	42
LAN settings	48
logging in	37
multicast settings	51
NDI settings	53
network settings	48

web interface (*continued*)

not accessible	65
NTP settings	52
ONVIF settings	51
port settings	48
PTZ presets	39
rebooting camera software	56
RTMP settings	49
RTSP authentication	51
selecting language	37
SRT settings	49
updating password	38
updating software	57
viewing camera details	55
web settings	
accessing	37
downloading upgrades	56
Home page	36
overview	36
PTZ presets	39
selecting language	37
updating software	57
viewing camera details	55

Z

Zone mode	
configuring in web interface	60
overview	58
zoom	8